



Audit Common Threats


- Notice the server is locked. The Windows lock screen shows the time and date.

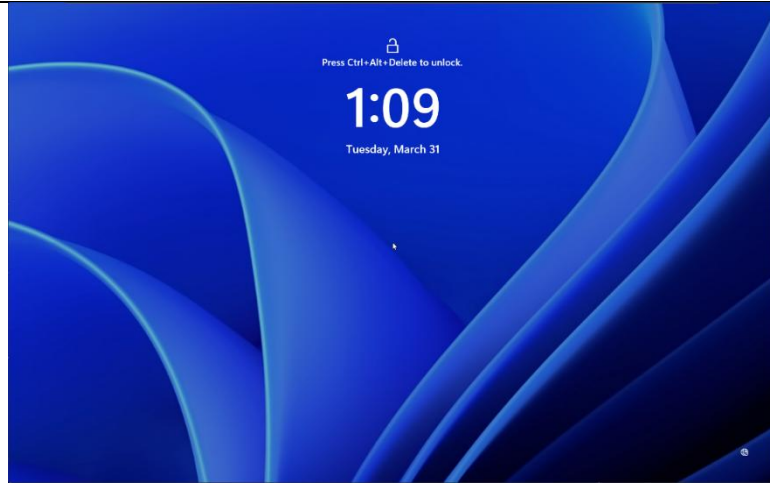


- Type the administrator password to log into the server.

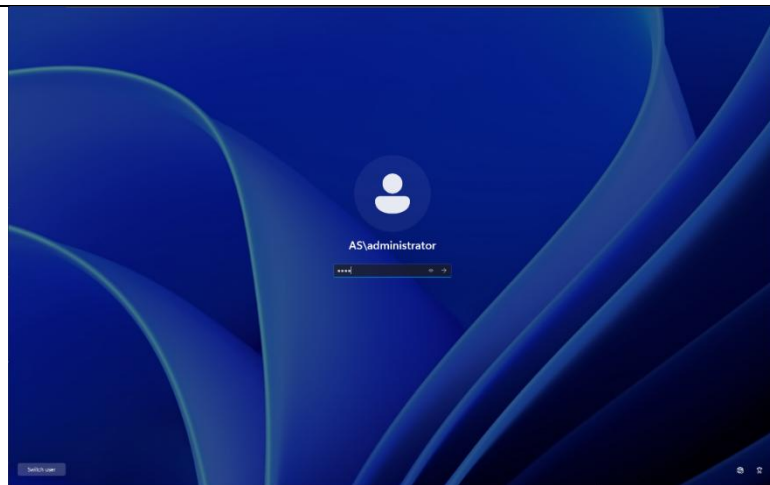


- See the desktop load after a successful login, showing the wallpaper.

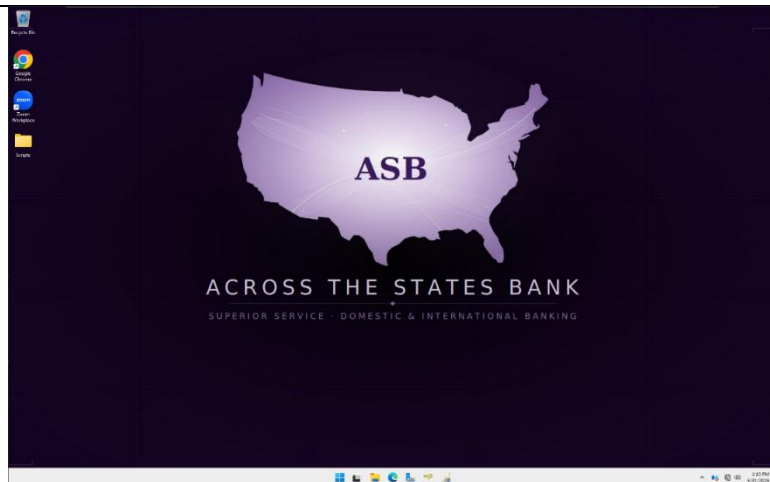


- Open File Explorer to the shared folders on the server, showing department folders like accounting, hr, and sales.

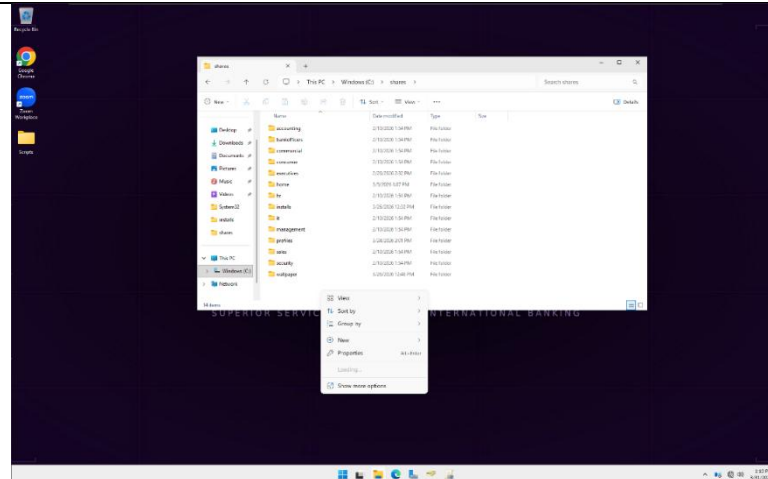


- Open the accounting folder and see that it is completely empty.

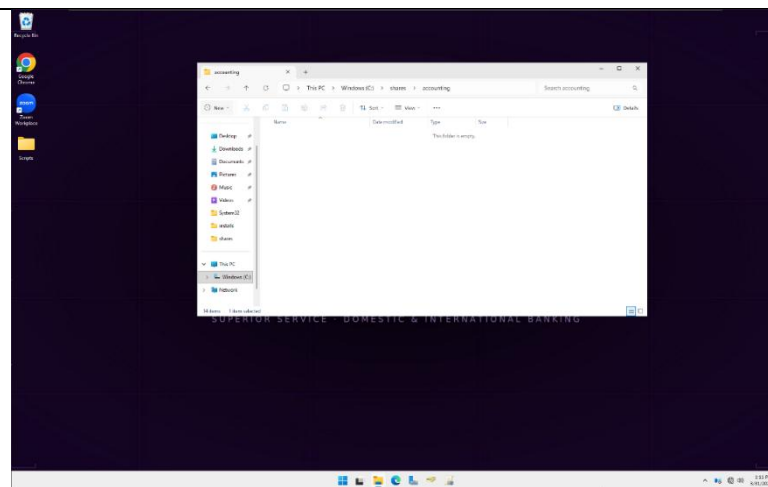


- Create a new folder called "payroll" inside the accounting share.

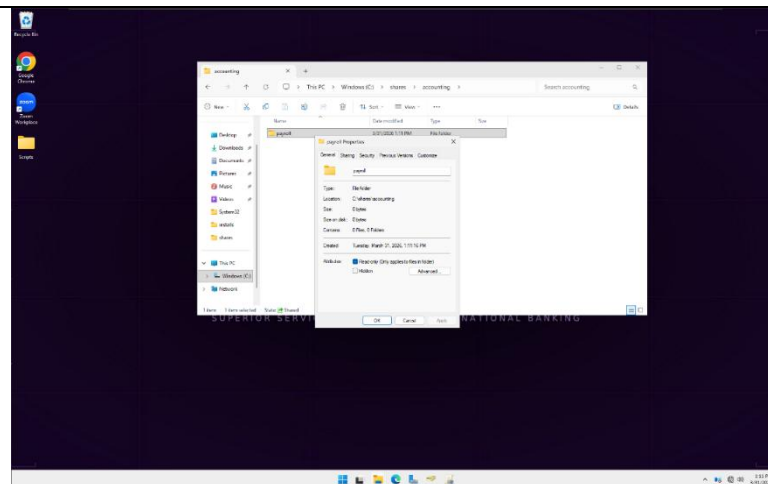


- Check the Sharing tab to confirm the payroll folder is shared on the network at \\ASS1\payroll.

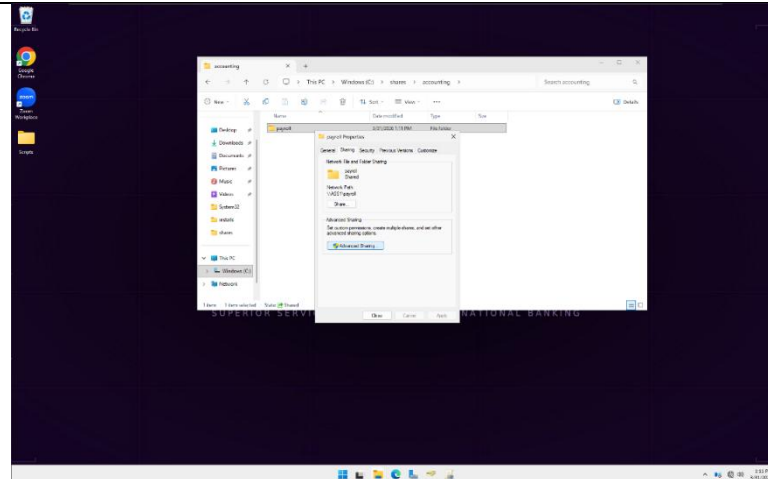


- Open the Security tab to see which groups have permission to access the payroll folder.

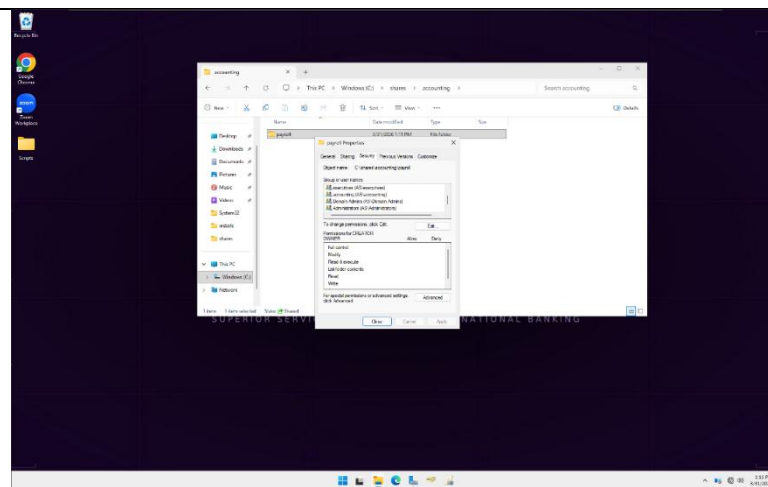


- Add the Users group and give it Full Control permission to the payroll folder.

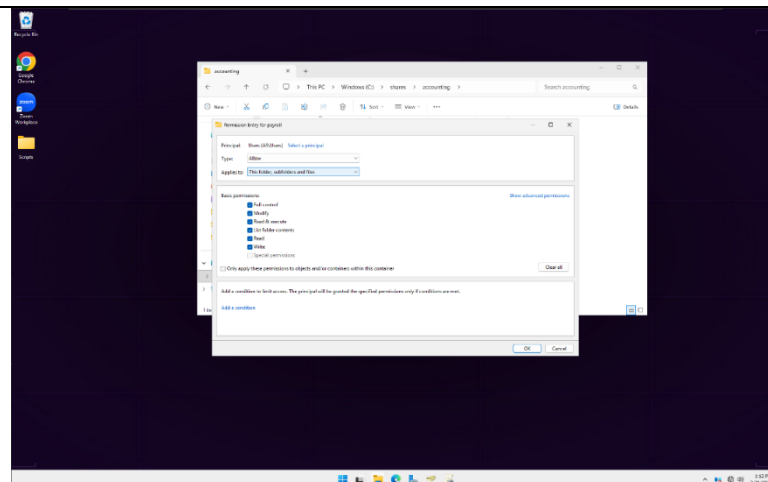


- Confirm the Users group now appears in the permissions list with full access.

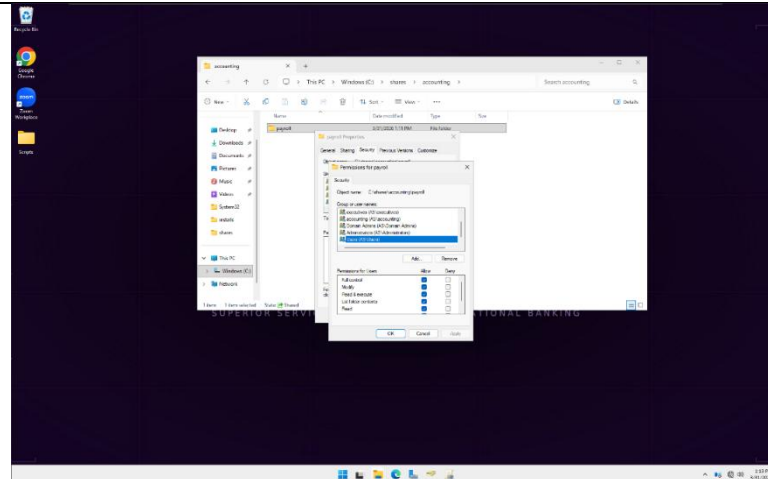


- Add the Everyone group to the permissions list with full access as well.

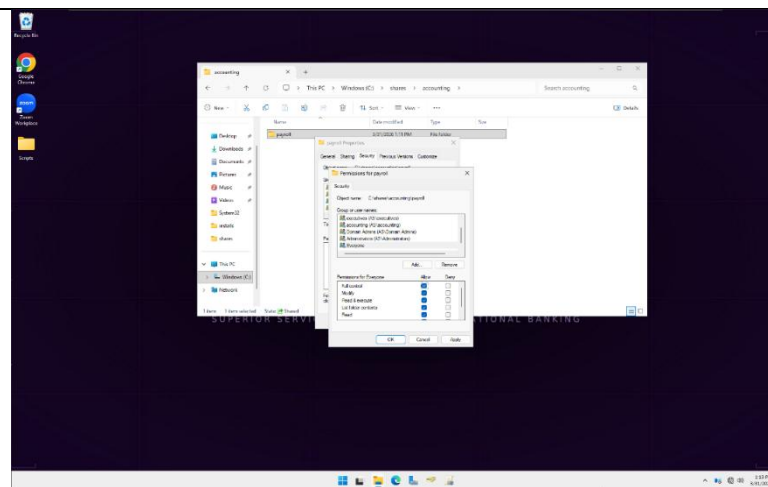


- Access the payroll folder from the workstation on the network and see that it shows up.

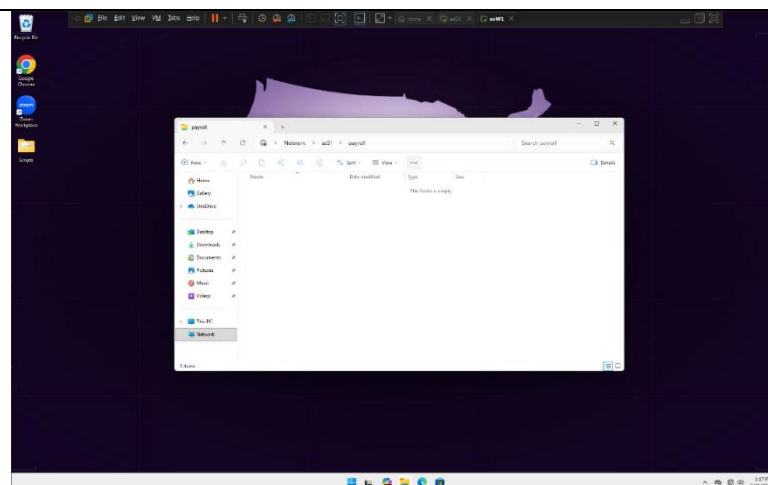


- Open Group Policy Management to see the existing policies applied to the as.bank domain.

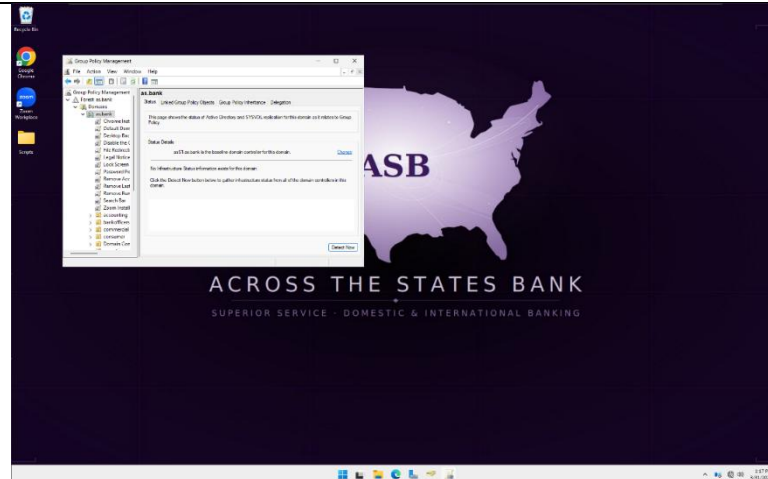


- Right-click the domain and select “Create a GPO in this domain” from the menu.

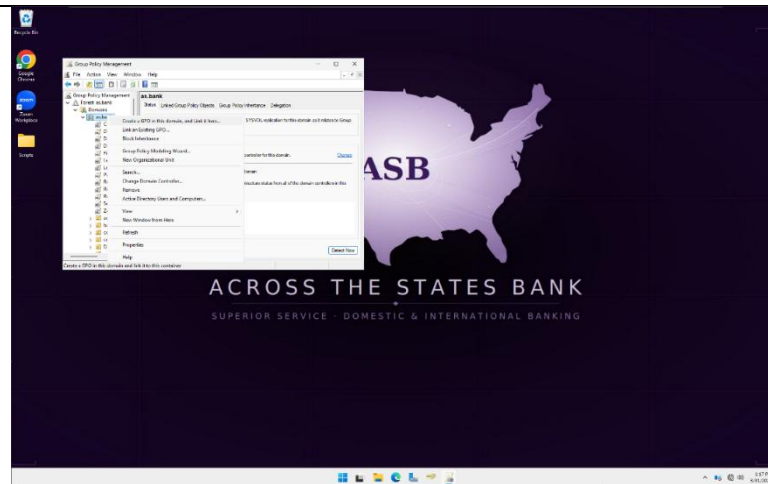


- Name the new Group Policy Object “HoneyPot” and click OK.

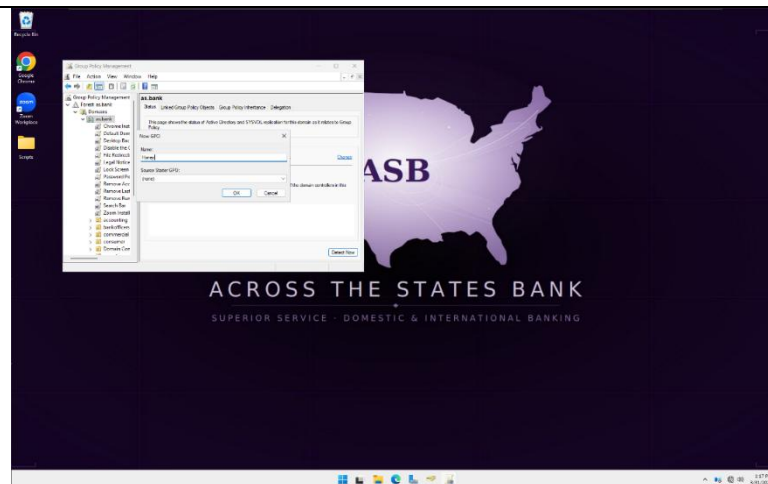


- Open the HoneyPot GPO in the editor to see the Computer Configuration settings.

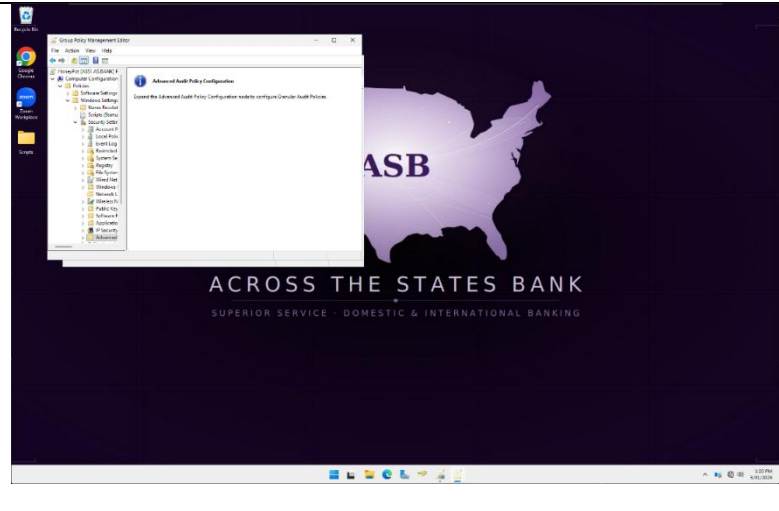


- Navigate to Object Access audit subcategories and see that all are set to “Not Configured.”

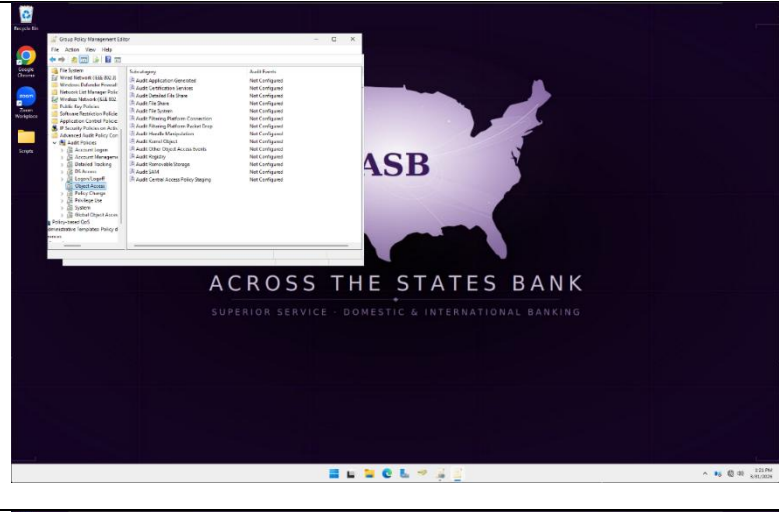


- Select “Audit File System” and highlight it, ready to configure.

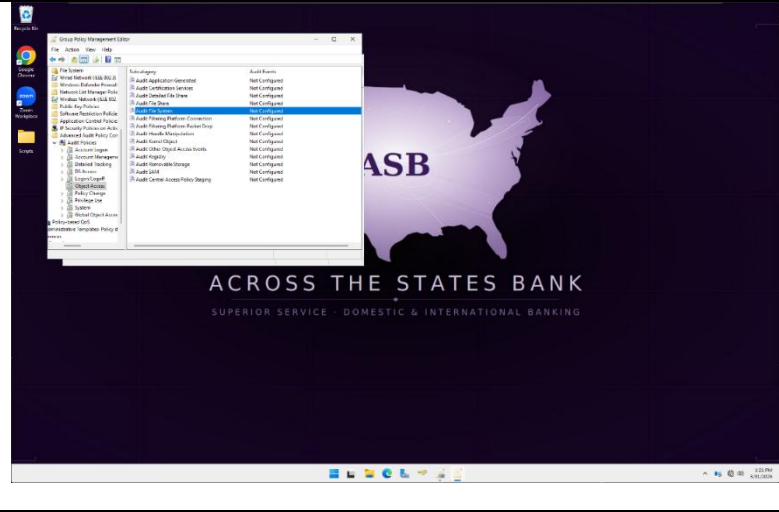


- Set Audit File System to log both successes and failures, then click Apply.

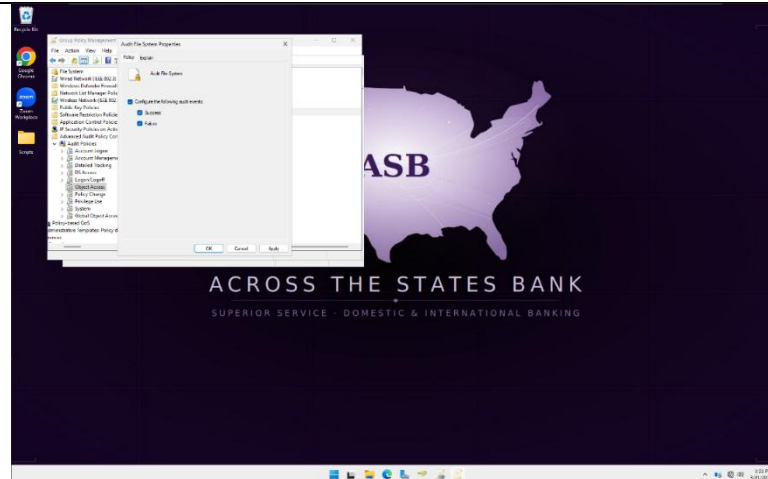


- Open Command Prompt and run “gpupdate /force” to apply the new policy right away.

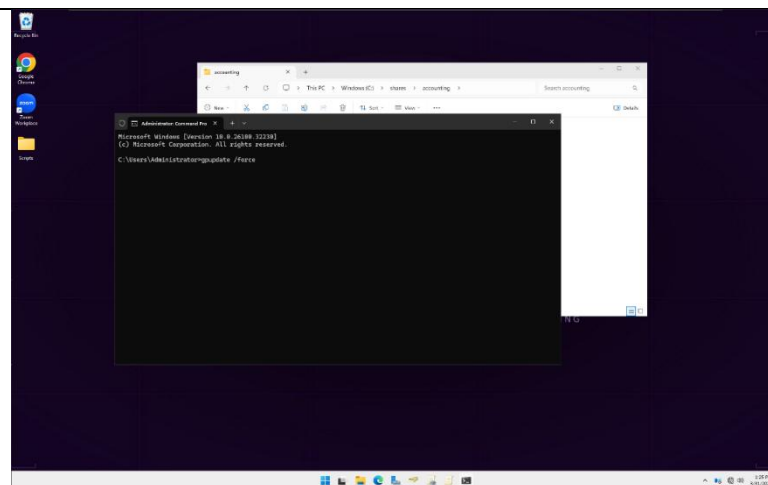


- Open Computer Management to access Event Viewer, which records system activity.

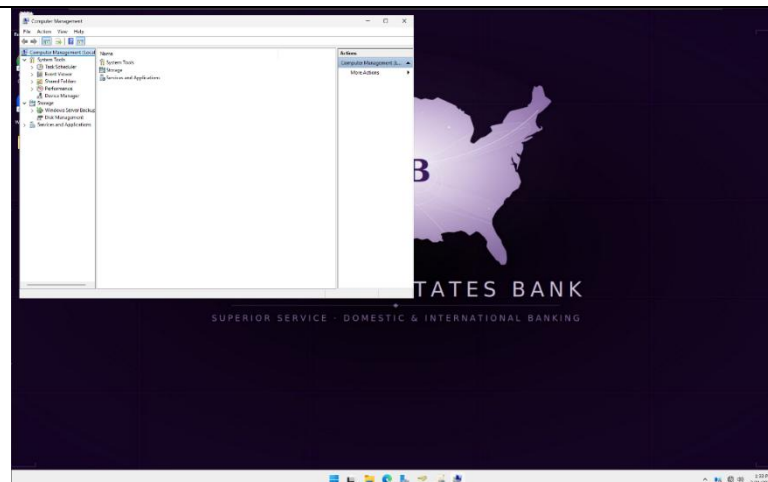


- Click on Event Viewer and wait for it to load a summary of recent system events.

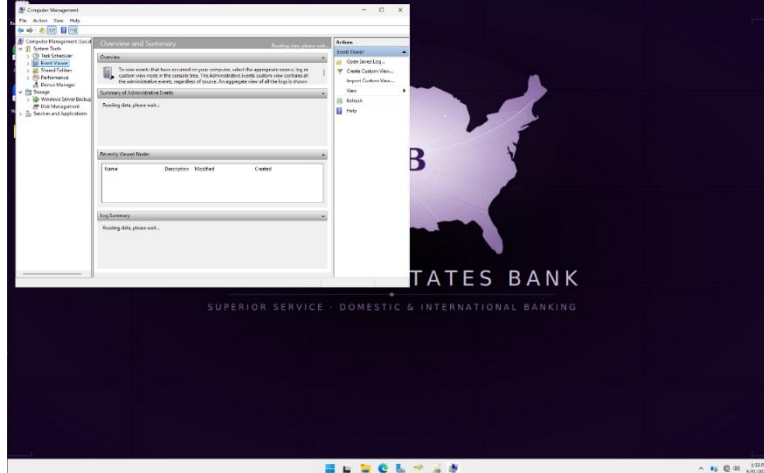

- Open the Security log.

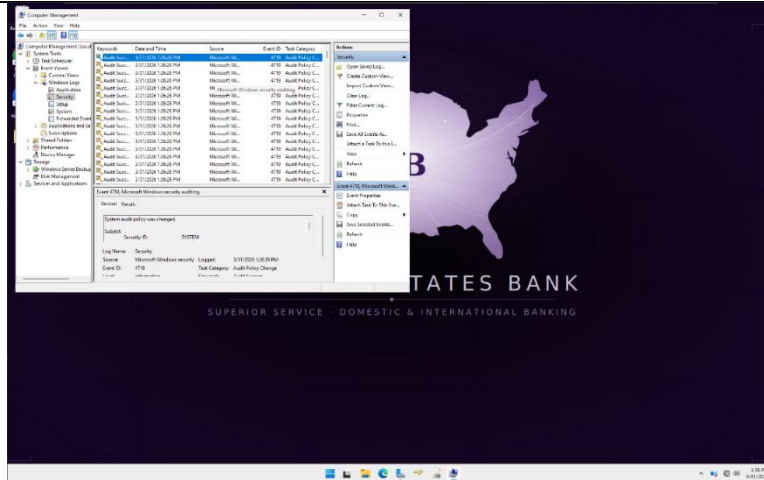

- Filter the log by Event IDs 4656 and 4663 to find file access attempts.

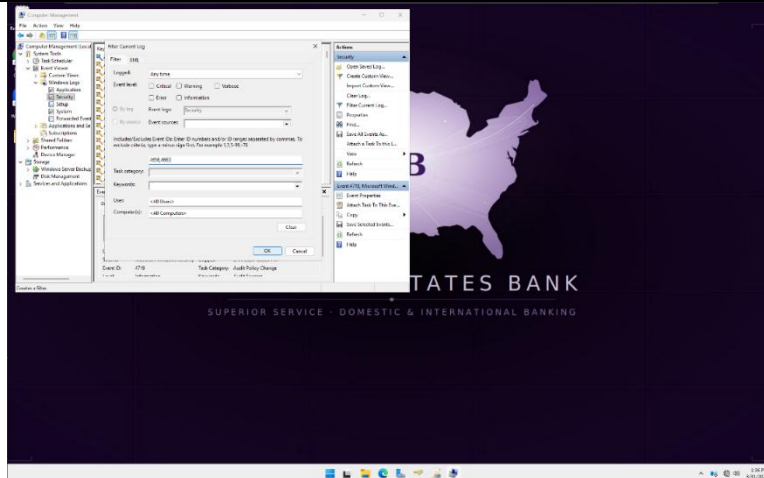


-
- The screenshot displays two overlapping windows from the Windows operating system. The background window is the 'Windows Security' application, showing the 'Security Settings' page. It lists various security features like Windows Defender, Windows Firewall, and Windows Security Center. The 'Windows Defender' section is expanded, showing the 'Virus & Threat Protection' settings. The foreground window is the 'Windows Defender' application, showing the 'Virus & Threat Protection' settings. It displays a list of detected threats, including 'Trojan:Win32/AdWare.Gen' and 'Trojan:Win32/AdWare.Gen'. The interface is clean and modern, with a white background and blue accents.


- [illegible]

-


- Open the HoneyPot GPO editor again and navigate to the Computer Configuration section.

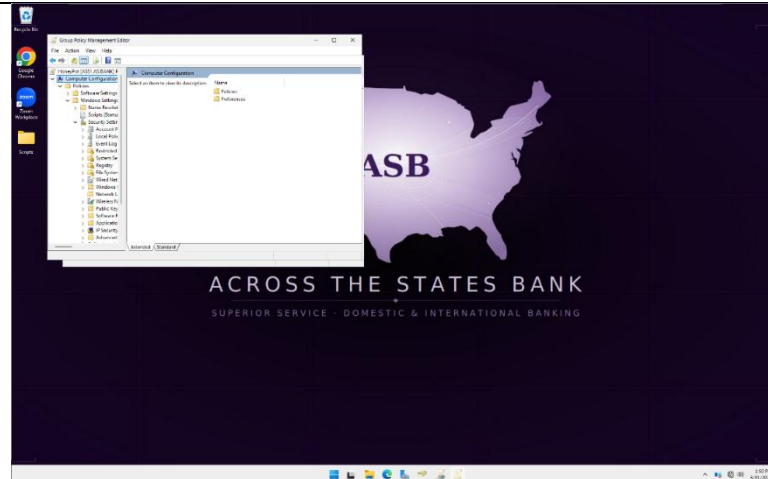


- Find the Advanced Audit Policies section and see all categories are still “Not configured.”

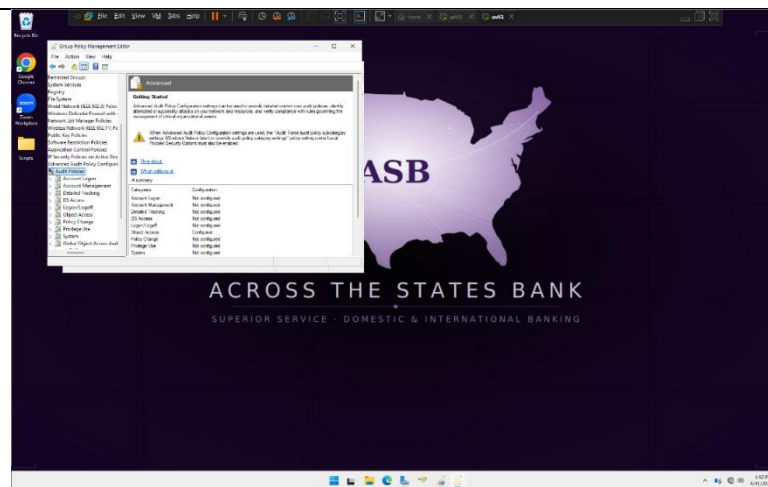


- Under Detailed Tracking, set “Audit Process Termination” to log successes.

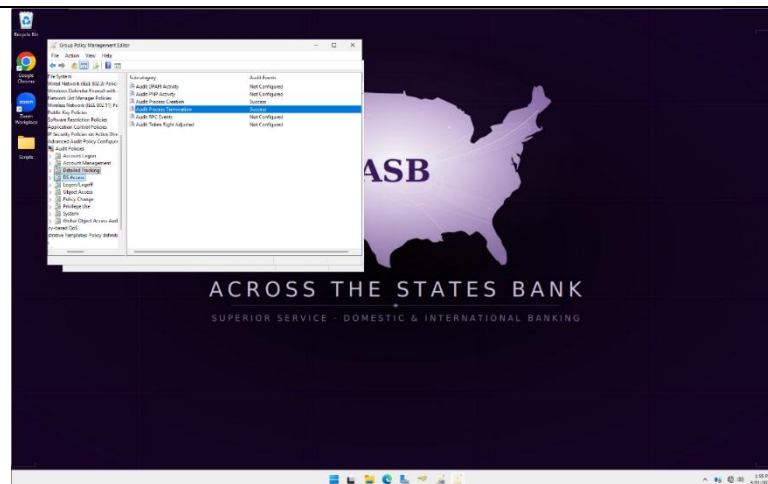


- Under DS Access, set “Audit Directory Service Changes” to log successes only.

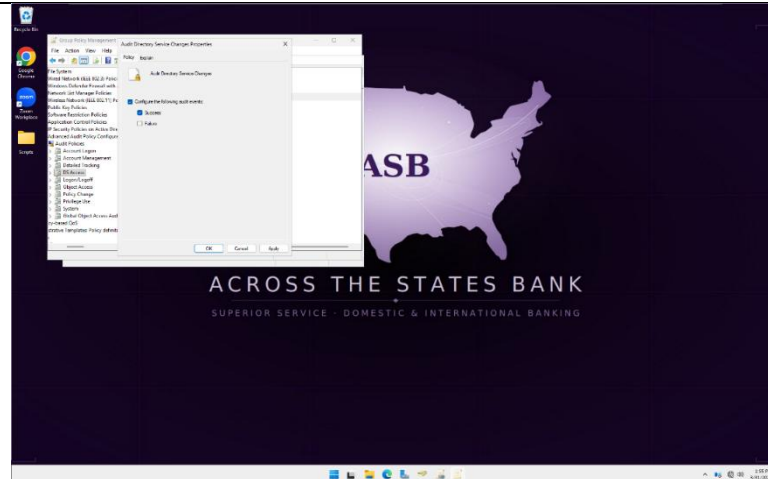


- Check the DS Access section and see multiple subcategories now set to “Success.”

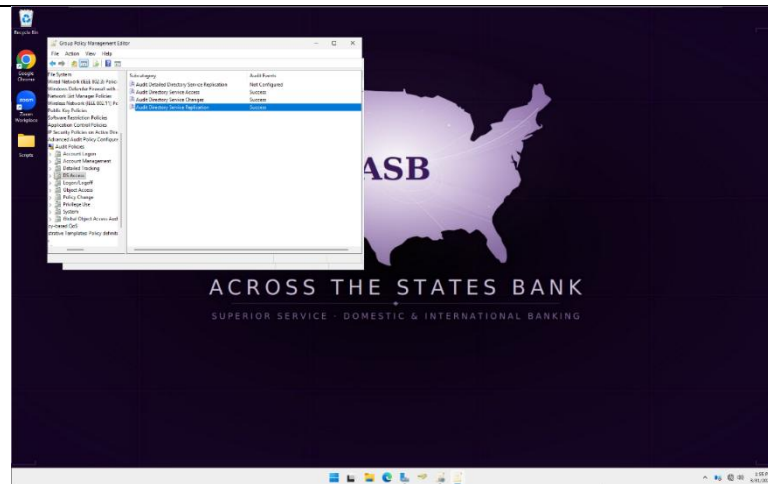


- Under Logon/Logoff, set both “Audit Logoff” and “Audit Logon” to log successes and failures.

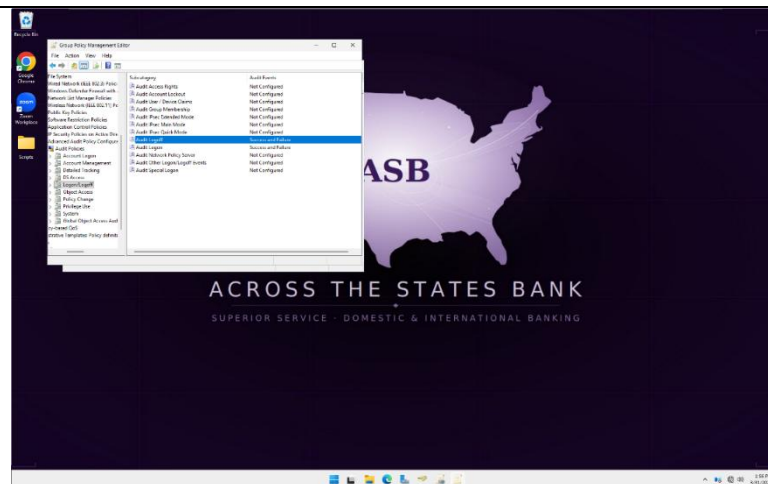


- Under Policy Change, set “Audit Audit Policy Change” to log both successes and failures.

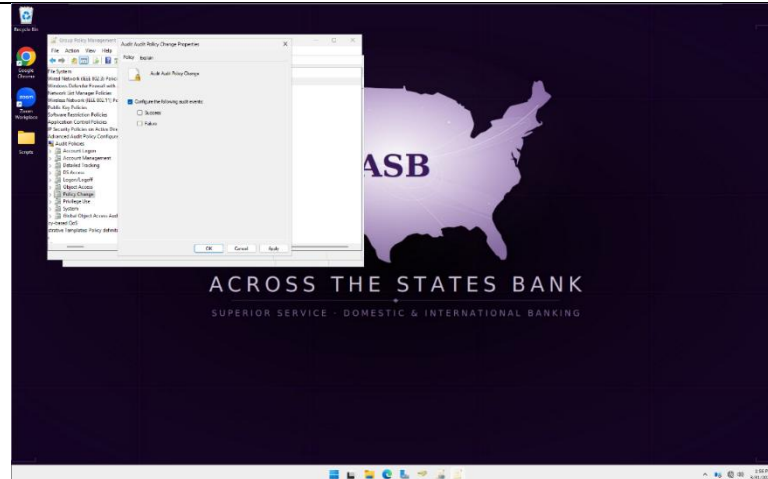


- Check the Policy Change section and see several subcategories now configured to log successes.

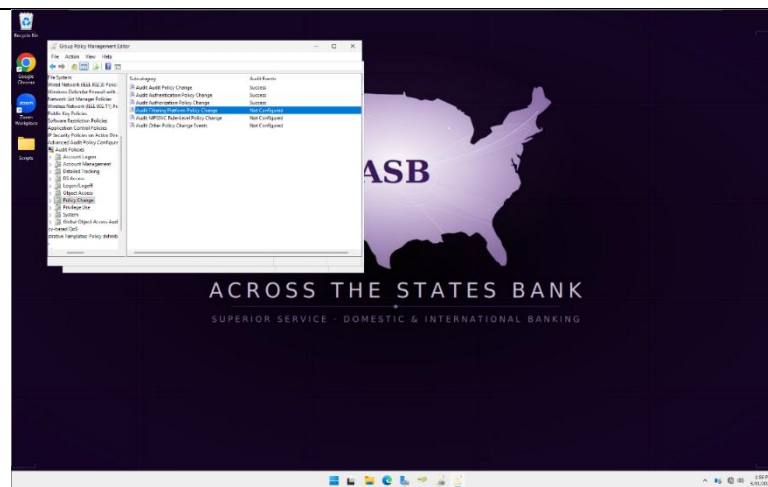


- Under System, set “Audit Security State Change” to log both successes and failures.

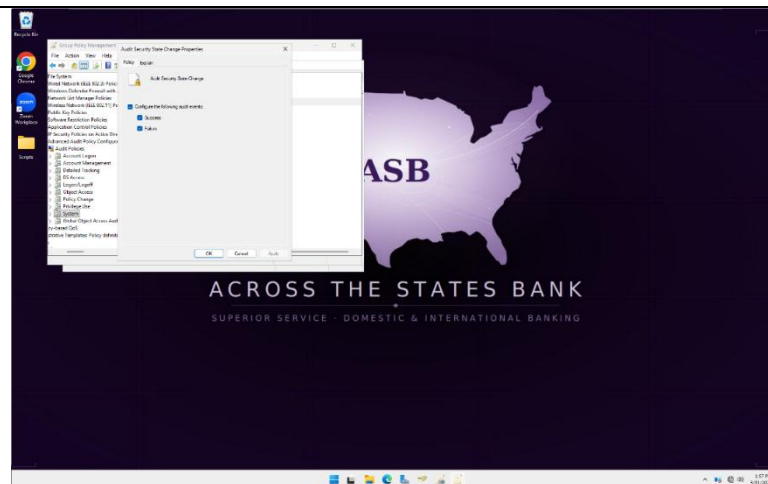

- Under System, set “Audit Security System Extension” to log successes only.

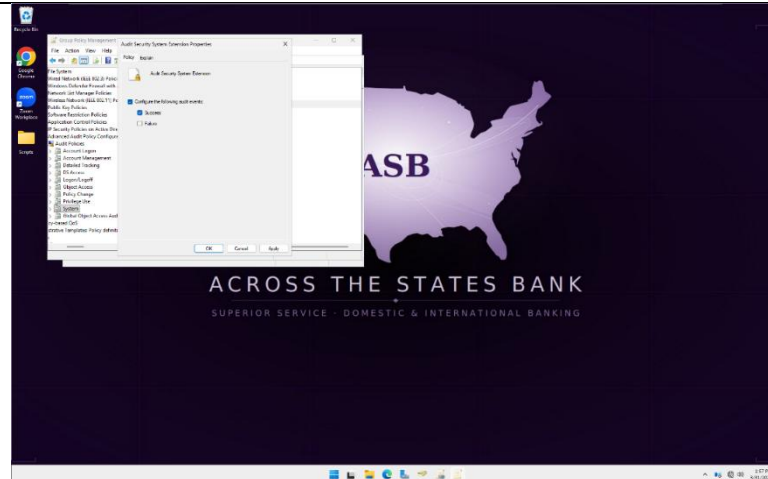

- Review the audit policy summary and see most categories now show “Configured,” meaning the honeypot is set up.

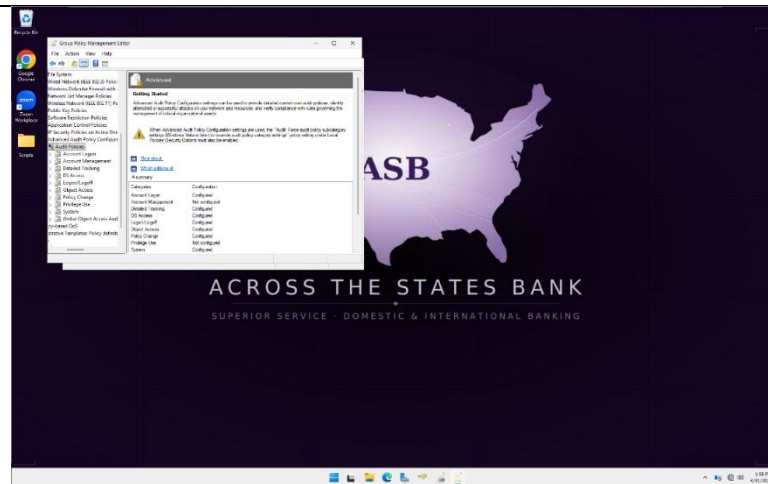

- Suspend the asS1 virtual machine in VMware.

