


DHCP


- Log into the server by typing the administrator password on the Windows login screen.




- See the server desktop load, showing the wallpaper.

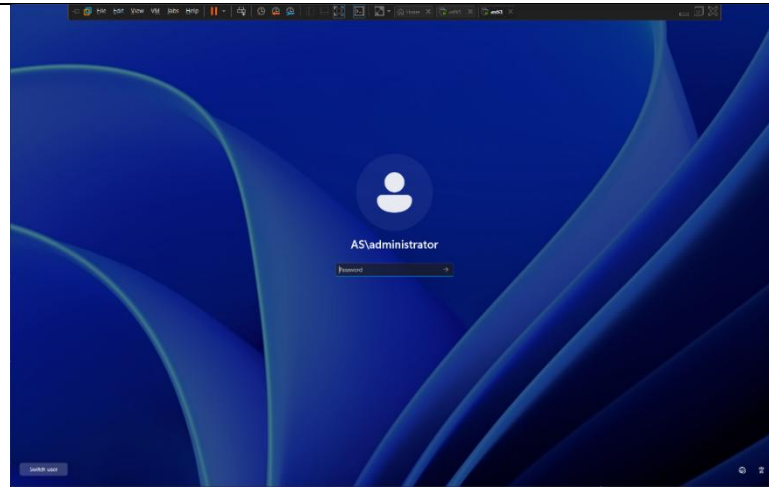


- Open Server Manager to see the Dashboard, which shows the roles already installed on the server.

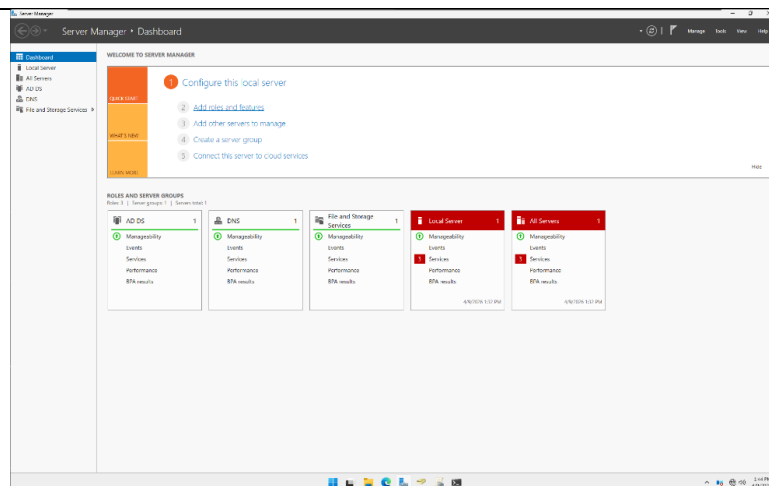


- Click “Add roles and features” in Server Manager to open the wizard and get started installing DHCP.

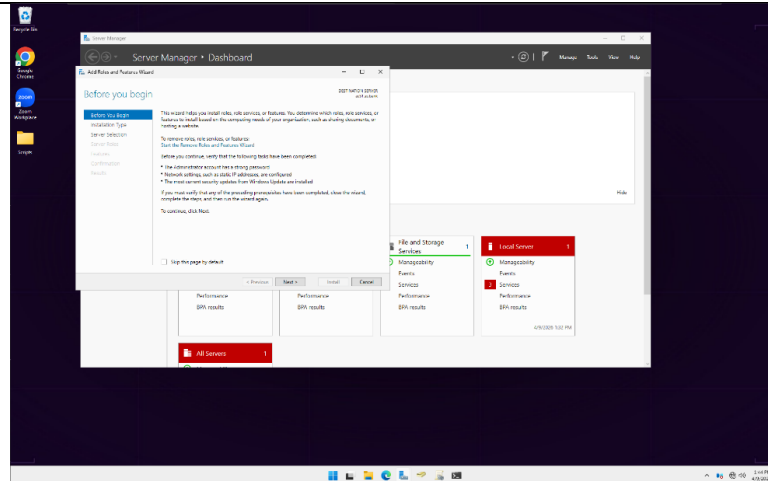


- Check the box next to “DHCP Server” in the list of server roles to select it for installation.

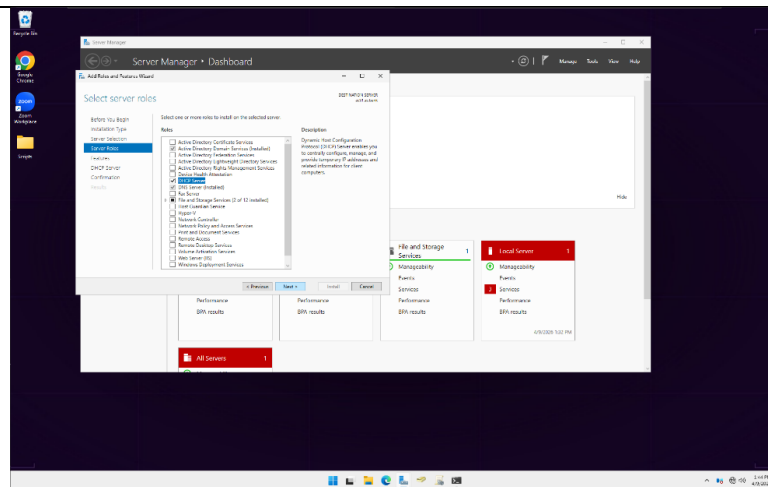


- Review the confirmation page showing DHCP Server and its tools are ready to install, then click Install.

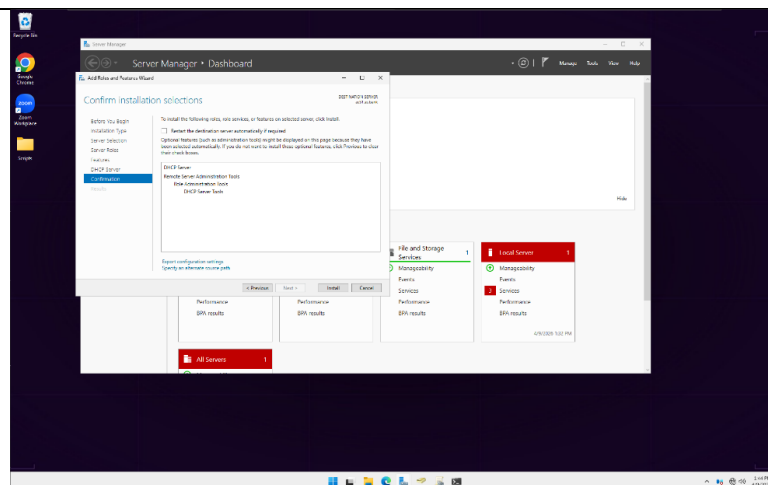


- Watch the installation progress screen as Windows begins installing the DHCP Server role.

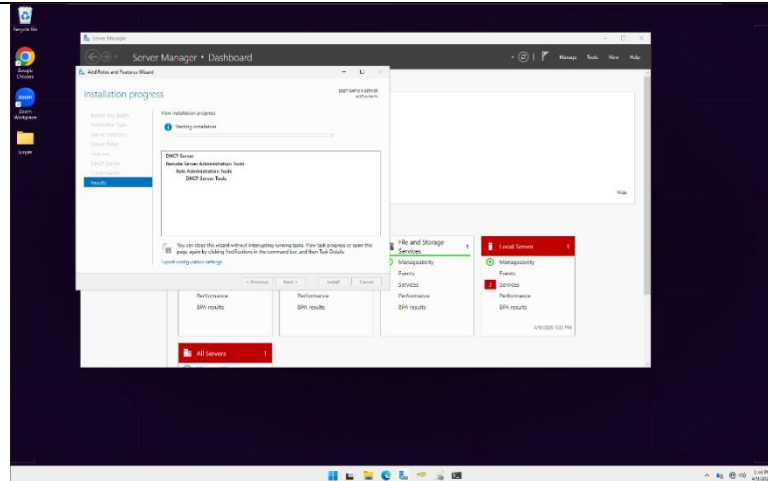


- See the installation finish successfully and click “Complete DHCP configuration” to set up the server.

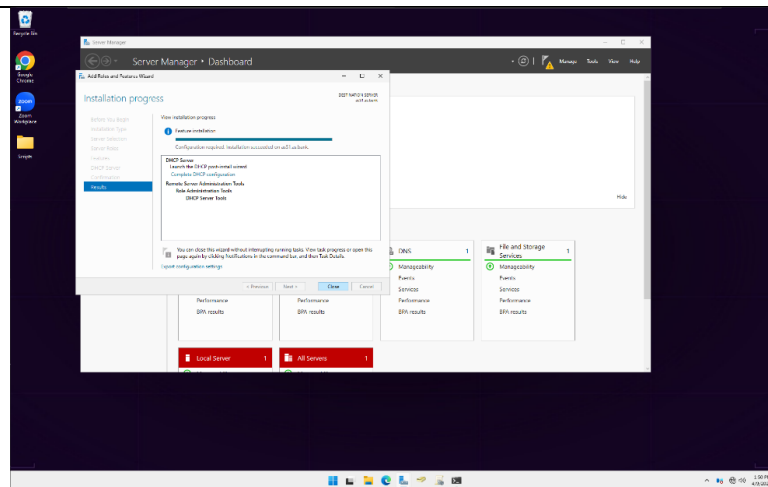


- See the Server Manager Dashboard now shows a DHCP tile, confirming the role was installed.

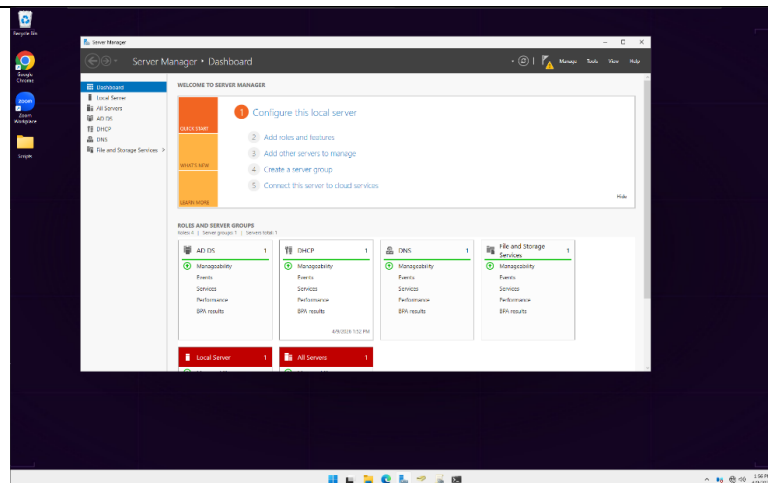


- Notice the yellow warning flag at the top of Server Manager. Click it to see the post-deployment notification to complete DHCP configuration.

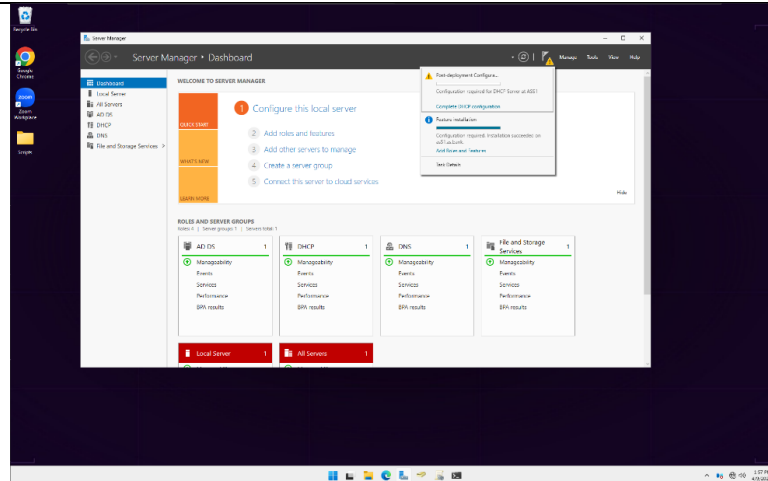


- Complete the DHCP Authorization step by using the current AS\administrator credentials to authorize the DHCP server in Active Directory.

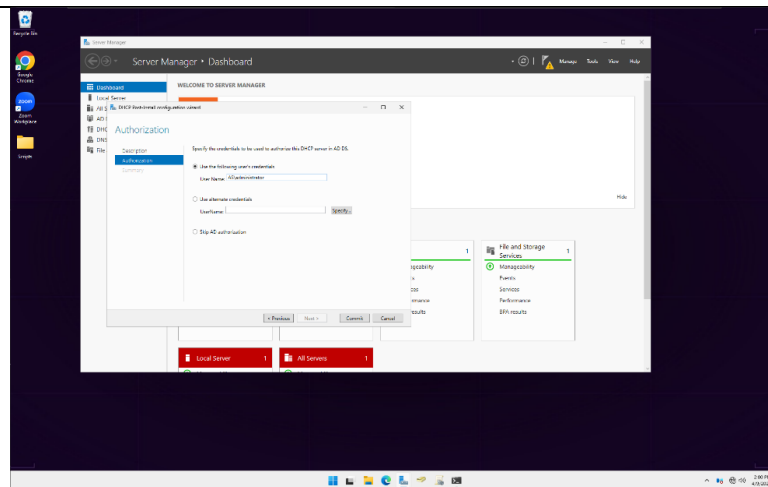


- See the Summary page confirm that security groups were created and the DHCP server was authorized successfully.

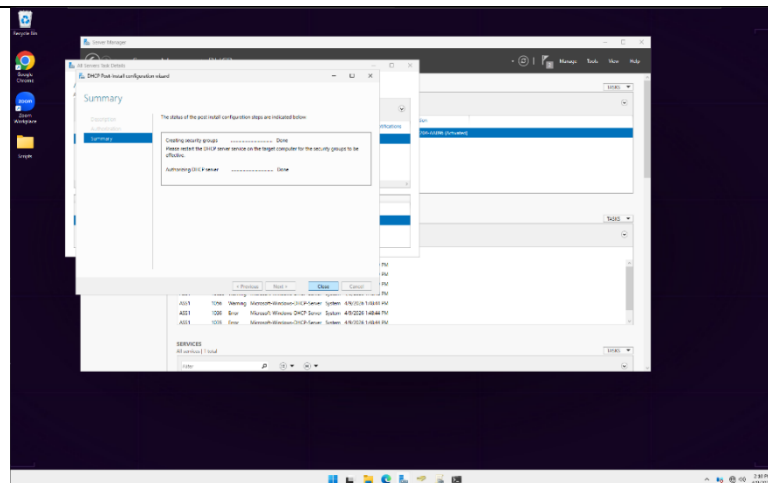


- Again confirm that DHCP is activated by checking the DHCP tab on the left.

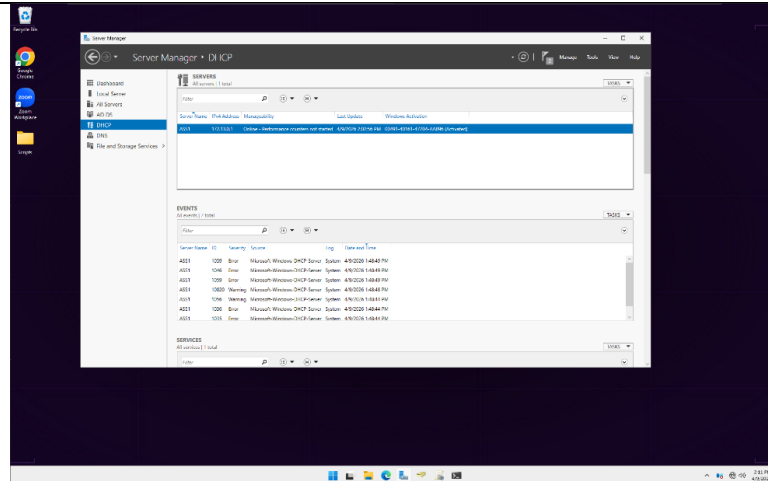


- Open the DHCP management console from the Tools menu. See the server ass1.as.bank listed in the left panel.

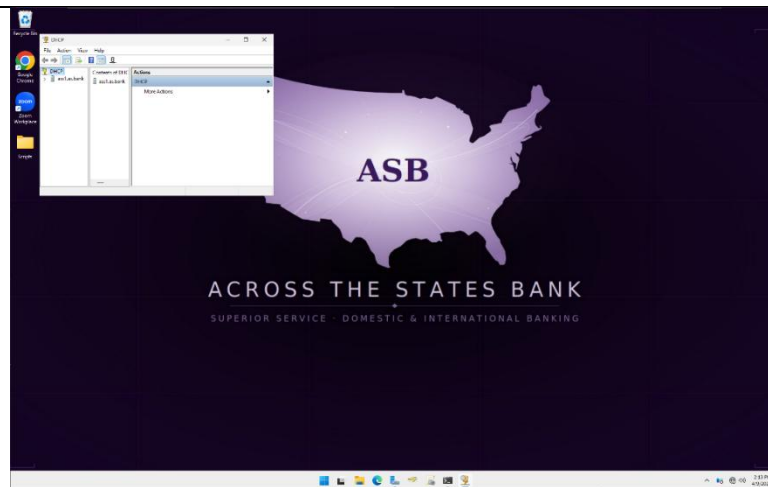


- Expand the server in the DHCP console to see the IPv4 and IPv6 sections ready to be configured.

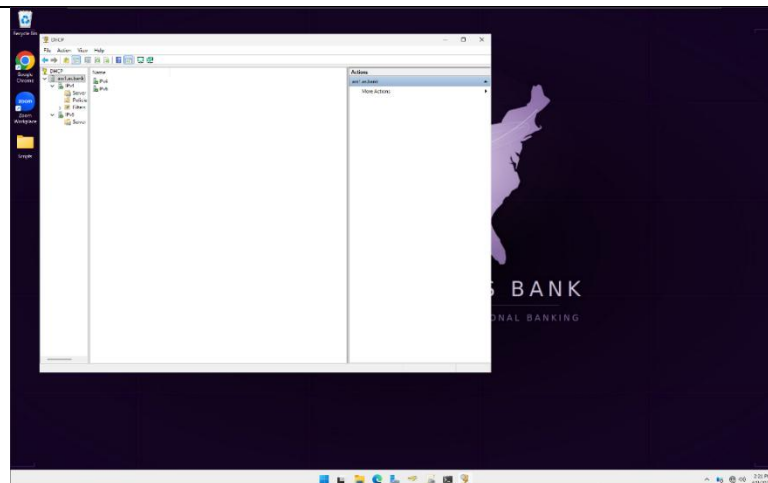


- Click the Action menu at the top and select “New Scope” to start creating a range of IP addresses for the server to hand out.

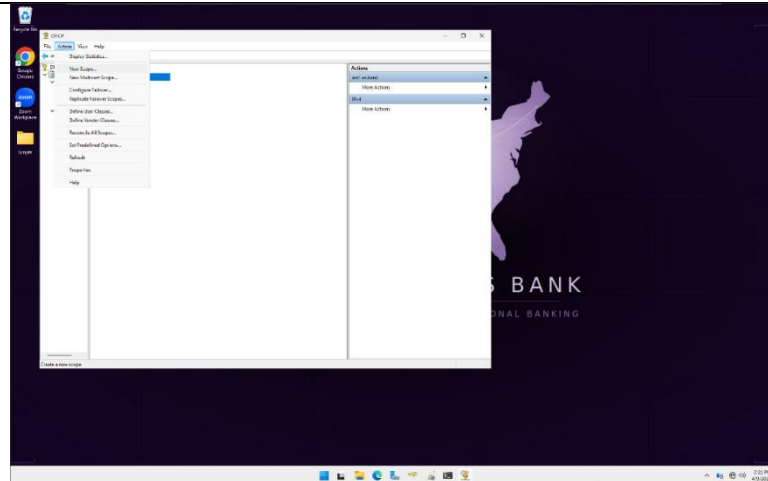


- See the New Scope Wizard open to the Scope Name page, ready for you to type a name for this scope.

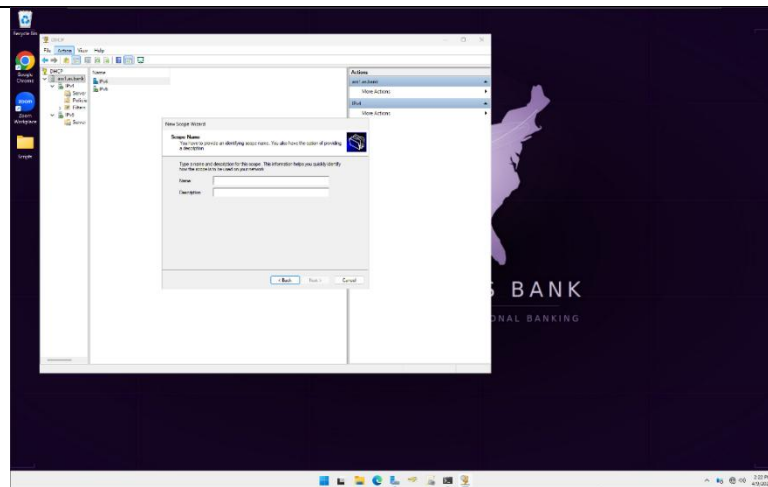


- Type “workstations” as the scope name and “End users” as the description, then click Next.

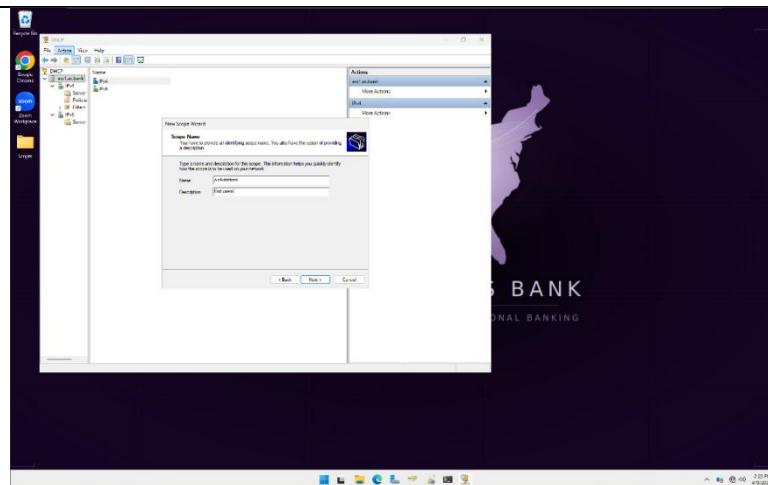


- Enter the IP address range for the scope: starting at 172.13.100.1 and ending at 172.13.255.254 with a subnet mask of 255.255.0.0.

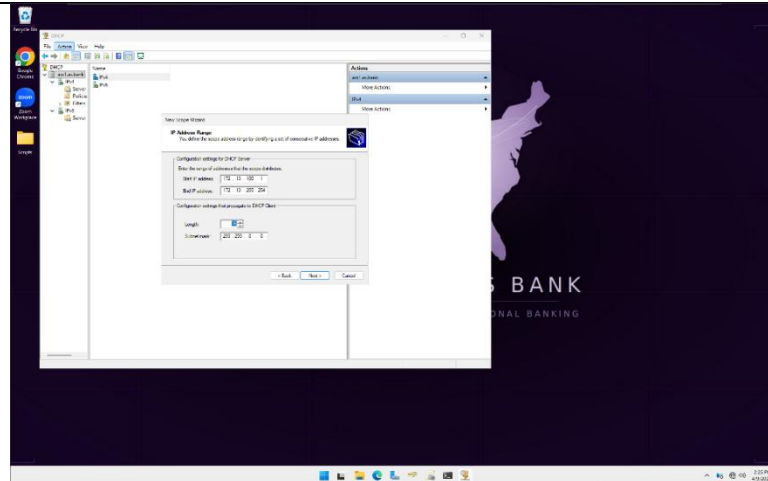


- Choose “Yes, I want to configure these options now” to set up the gateway, DNS, and other settings right away.

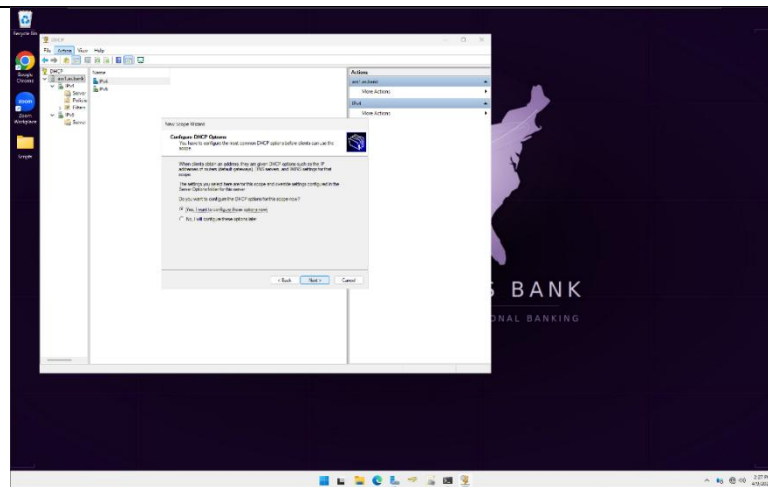


- Enter the parent domain as “as.bank” and the DNS server name as “asS1” with IP address 172.13.0.1, then click Add.

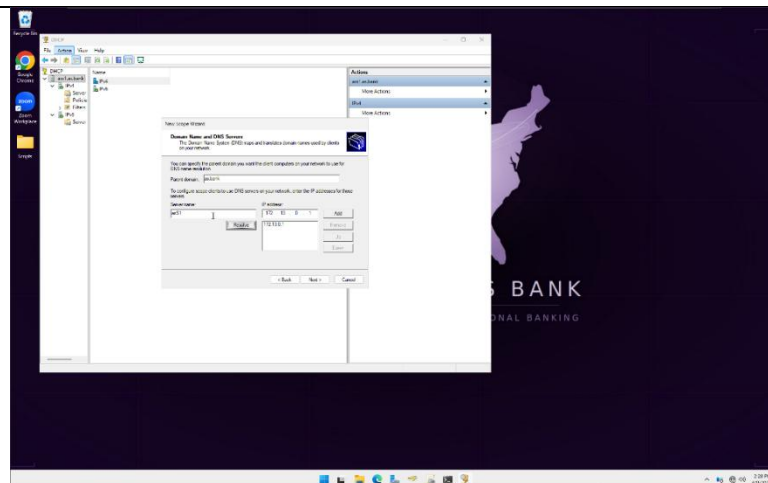


- Choose “Yes, I want to activate this scope now” so the DHCP server can immediately start handing out IP addresses.

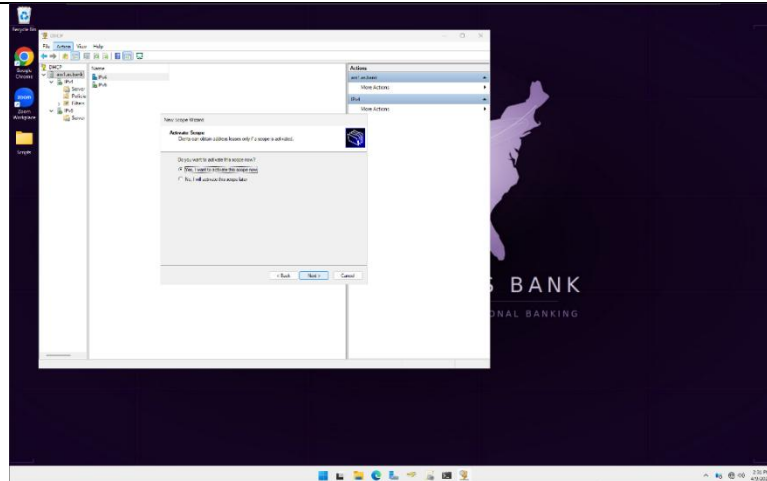


- See the new “workstations” scope now appears in the DHCP console with a status of Active.

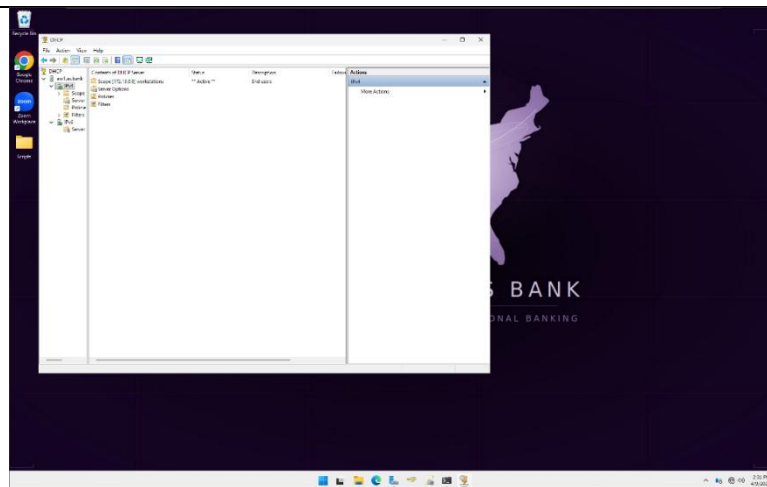


- Switch to the workstation machine and log in as an administrator on the Windows login screen.

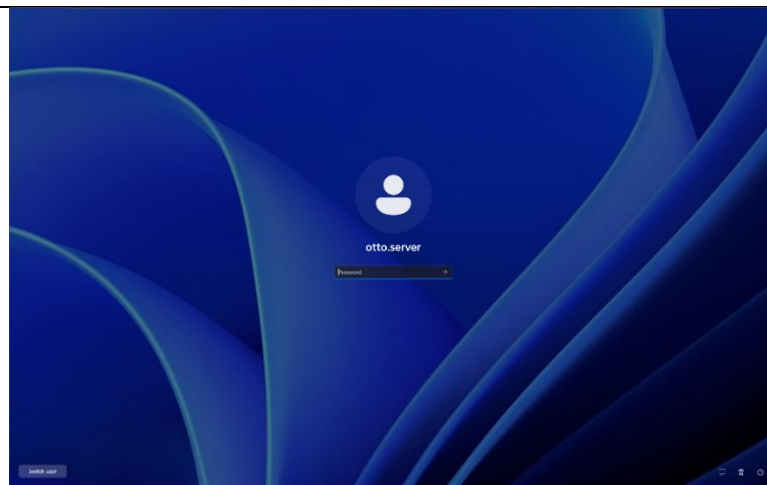


- Open Network Connections, right-click on Ethernet0, and select Properties to check the network settings.

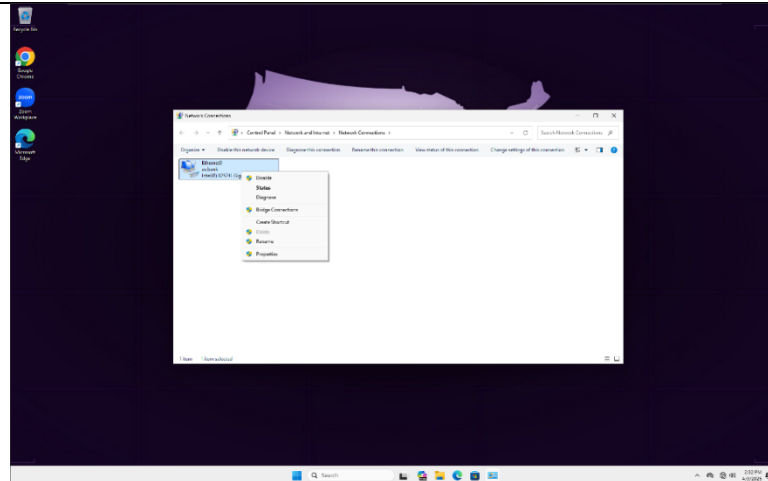


- See the Ethernet0 Properties window. Click on “Internet Protocol Version 4 (TCP/IPv4)” and then click Properties.

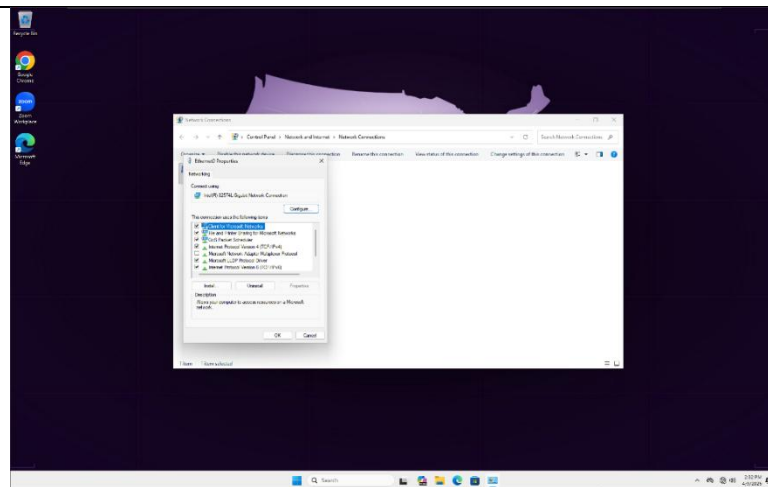


- Confirm the IPv4 settings are set to “Obtain an IP address automatically,” meaning it will get an address from the DHCP server.

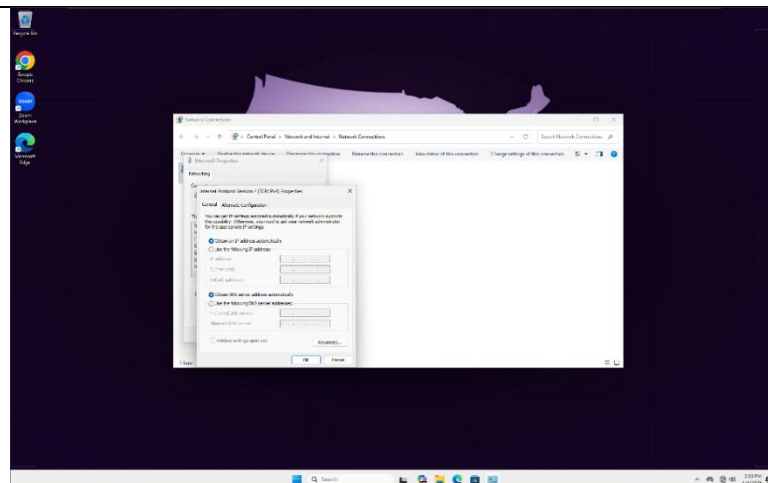

- Open Command Prompt and run “ipconfig /release” to drop the current IP address, then start typing “ipconfig /renew.”

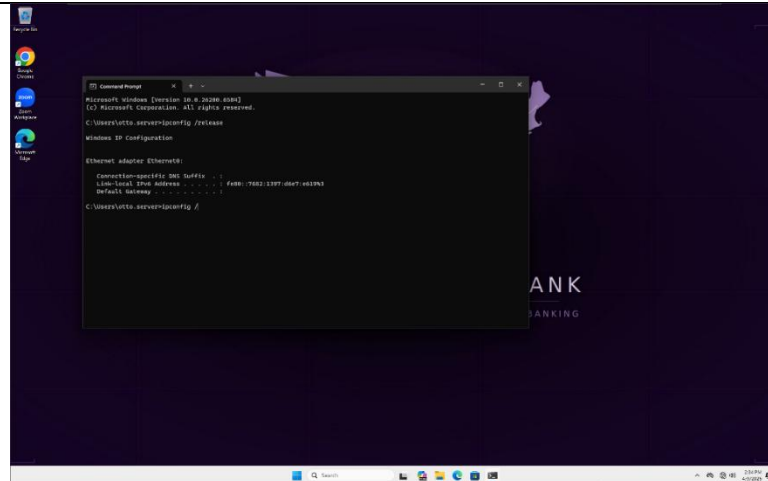

- Run “ipconfig /renew” and see the client is assigned IP address 172.13.100.1 from the DHCP server.

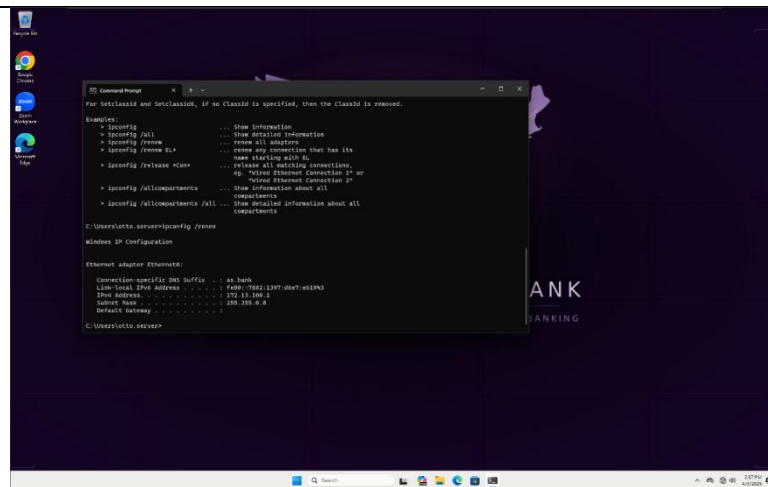

- Run “ipconfig /all” from the other VM to see the full network details, confirming DHCP is enabled and the lease was obtained from the server at 172.13.0.1.

