



Directory Services


- Open both the Windows Server 2025 and Windows 11 Workstation virtual machines in your virtualization software.

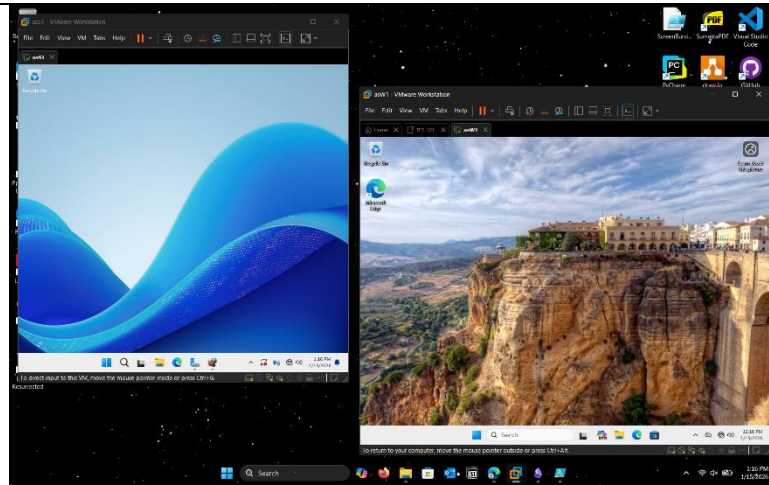


- Click the Search bar or press on the Server and type sysdm.cpl to open System Properties applet.

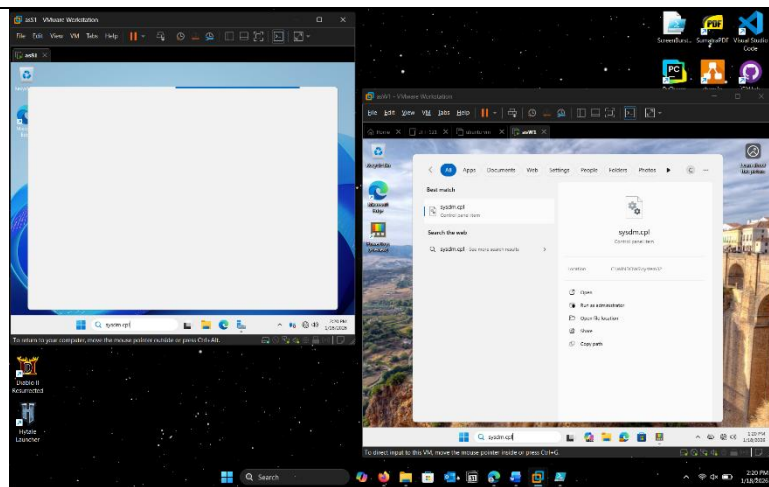


- In the "Computer Name/Domain Changes" window, change the Server name to asS1 and the Workstation name to asW1. Ensure both are still members of the "WORKGROUP" at this stage.

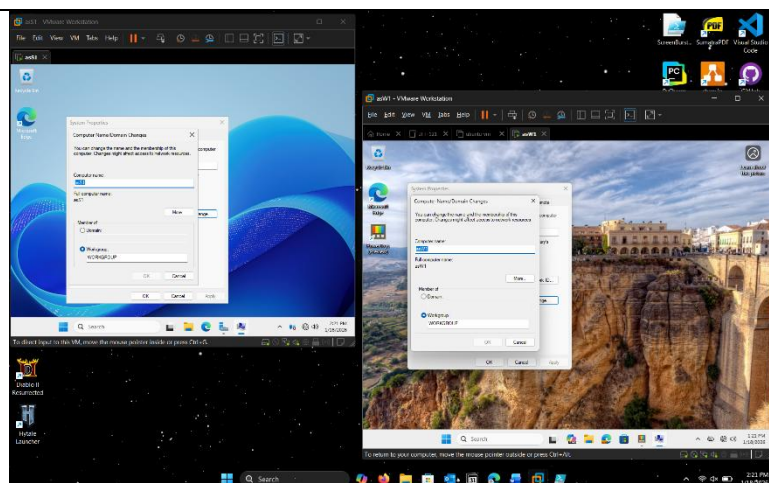


- Open Server Manager and click on "Add roles and features" from the dashboard.

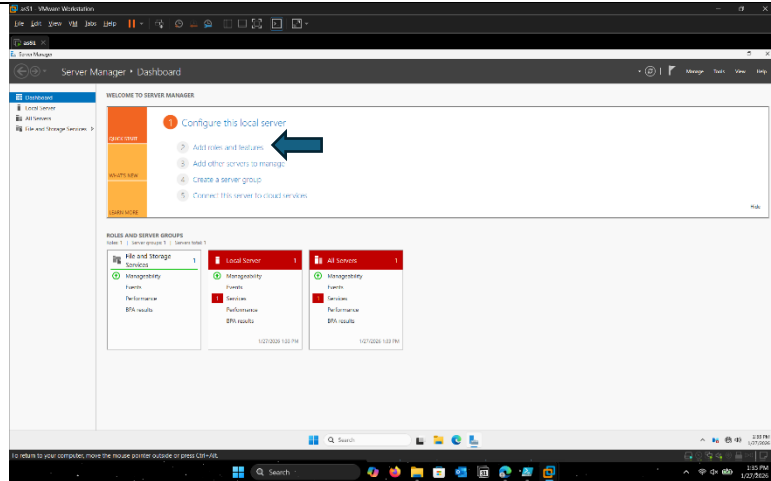


- Click "Next" on the initial wizard screen, ensuring the administrator has a strong password as required.

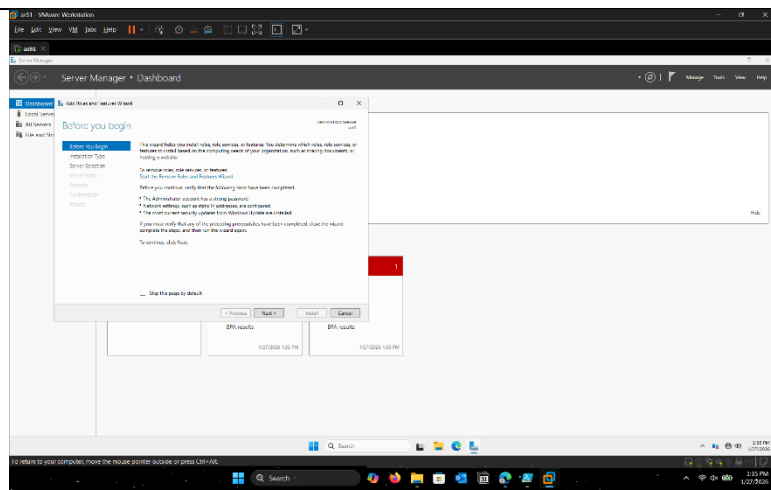


- Select "Role-based or feature-based installation" and proceed.

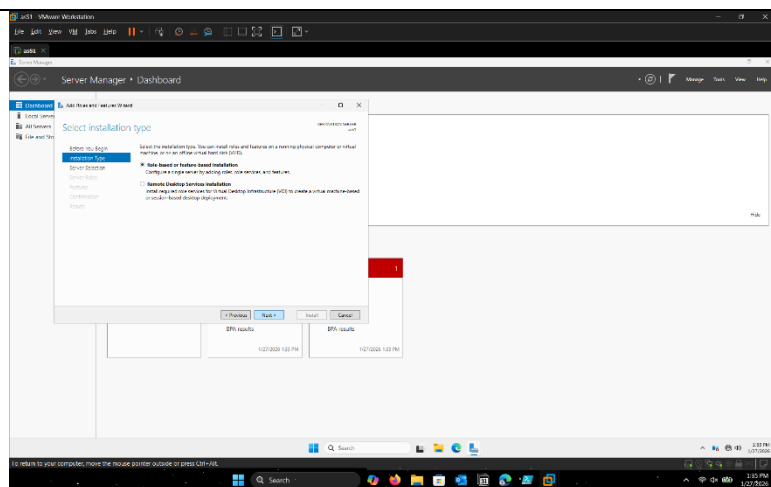


- Scroll down and check the box for Active Directory Domain Services.

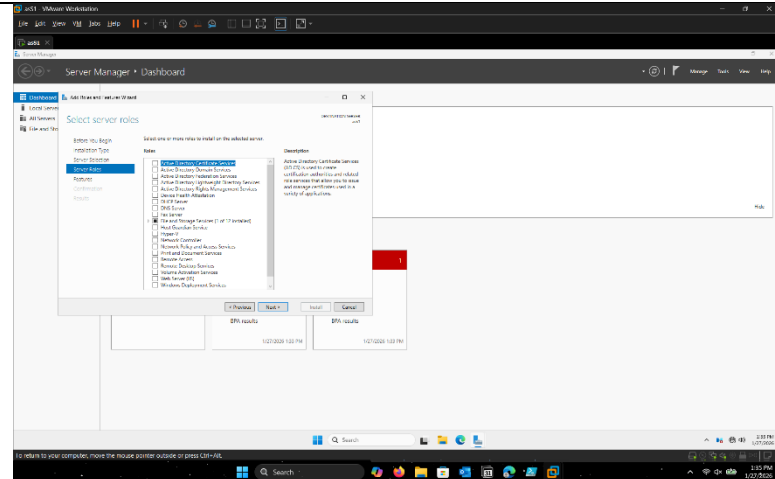


- Leave the default features selected (such as Group Policy Management) and click Next.

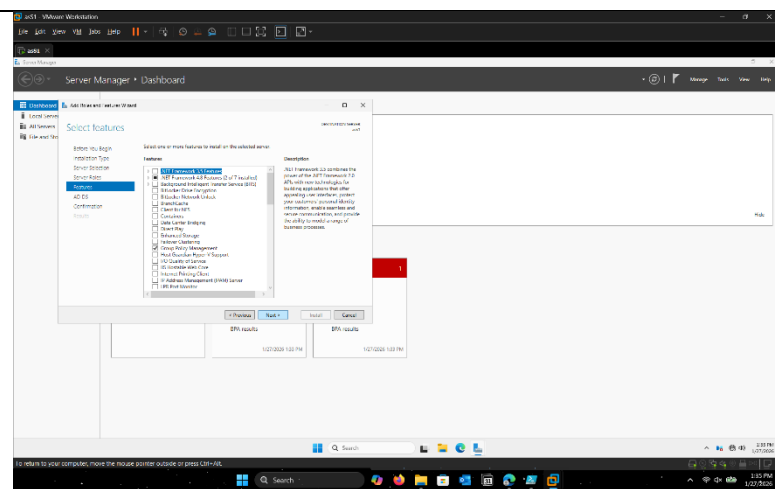


- Review the installation selections and click "Install".

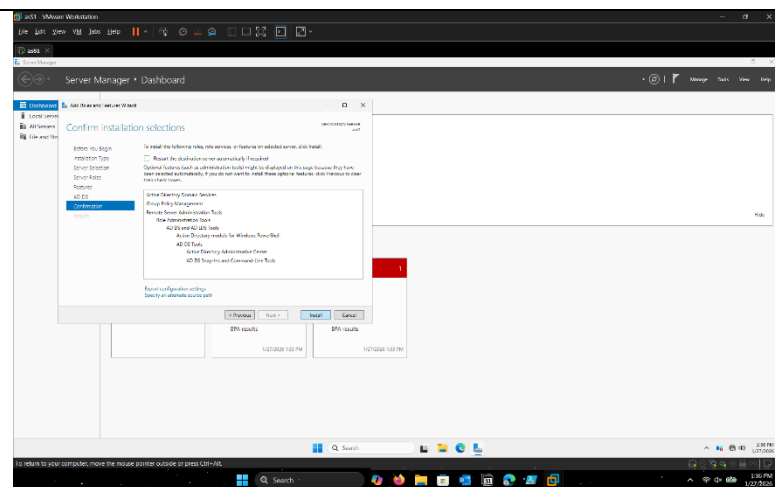


- Monitor the installation progress bar as the AD DS binaries are deployed to the server.

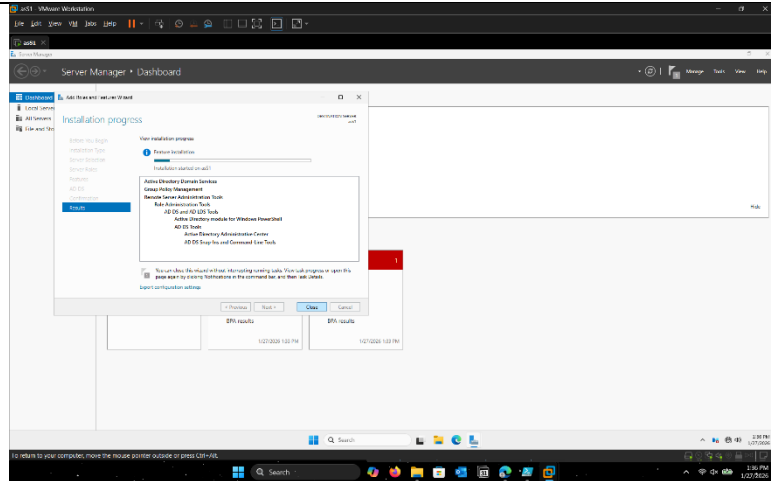


- Once the progress bar is complete, look for the "Configuration required" link to move to the Promotion phase.

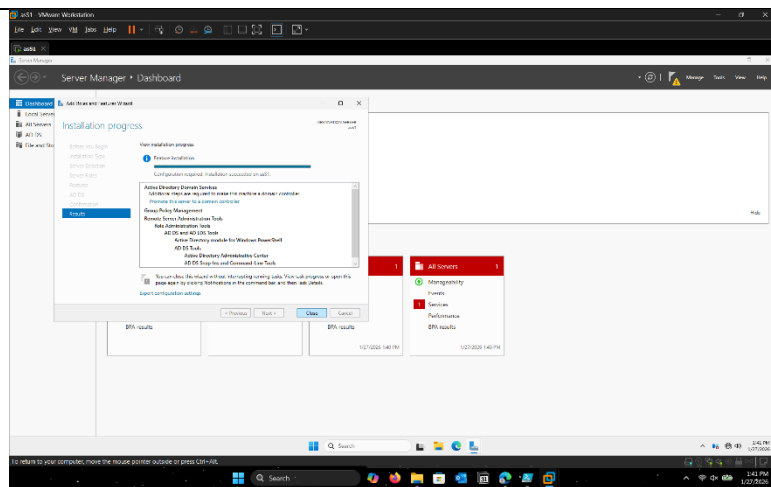


- Click the yellow notification flag in Server Manager.

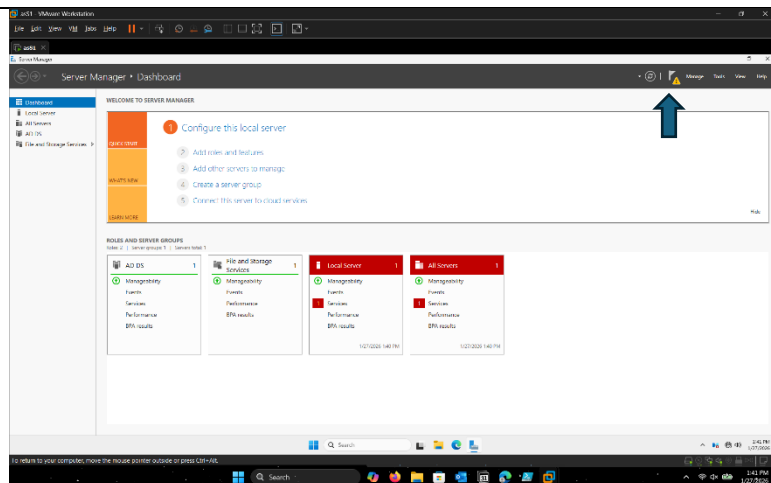


- Select "Promote this server to a domain controller".

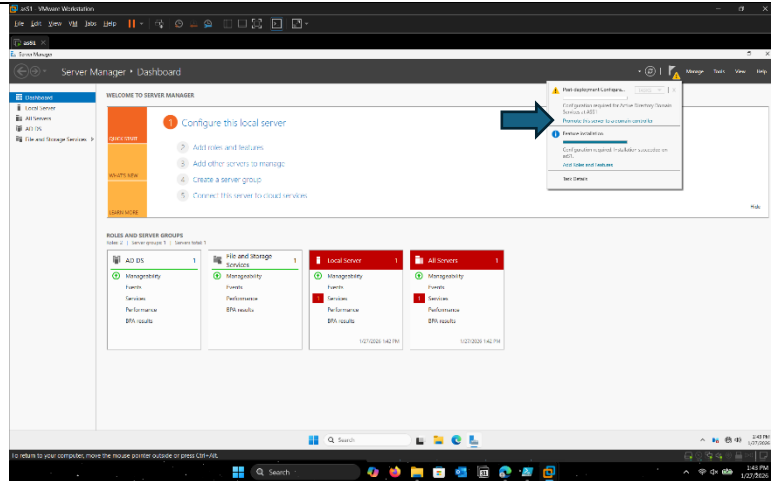


- You should see the Deployment Configuration Screen

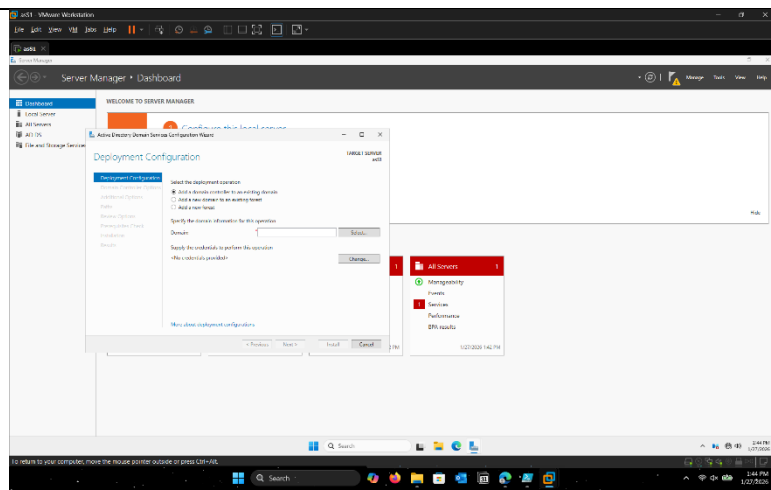


- Select "Add a new forest" and enter your root domain name as as.bank.

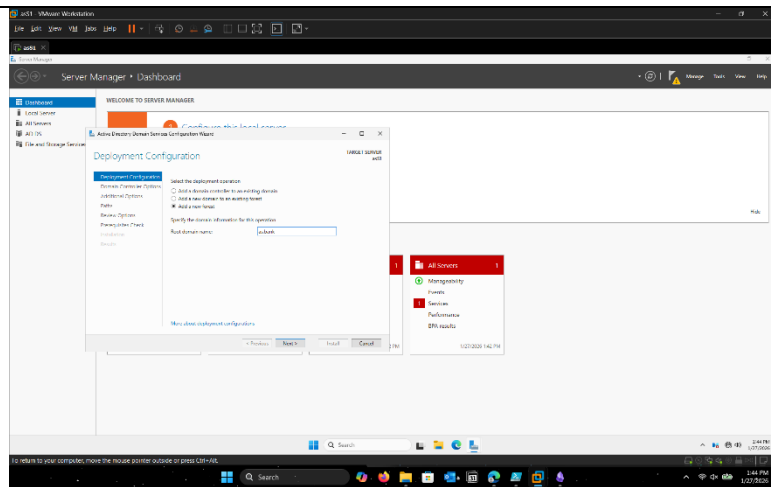

- Select the following boxes.

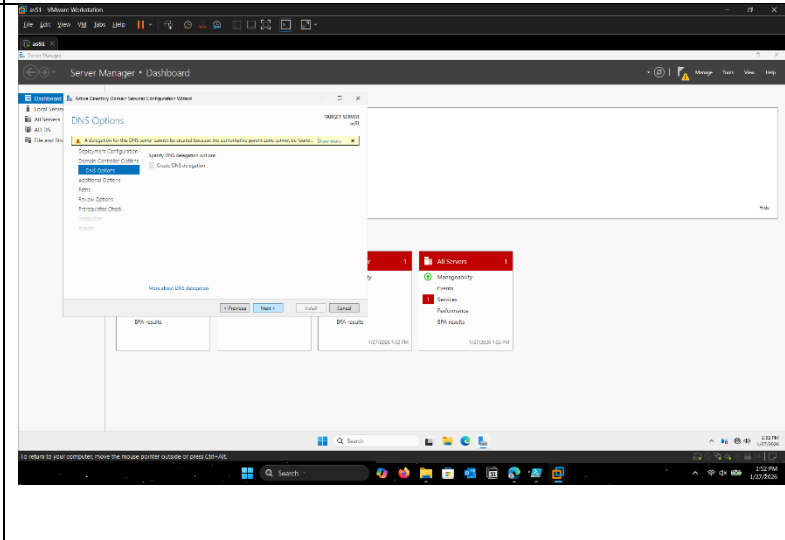


- Click Next through the DNS Options; the warning is expected for a new forest.

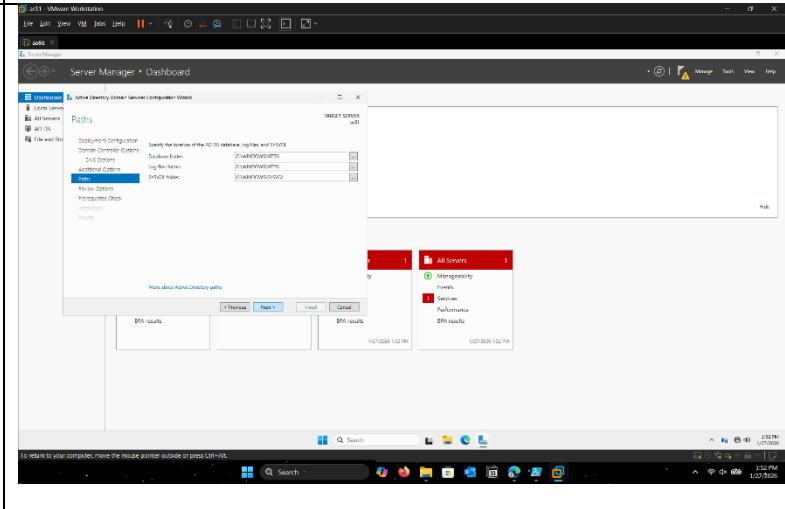


- Review the default locations for the Database, Log, and SYSVOL folders.


- Wait for the system to verify that all prerequisites passed before clicking "Install".

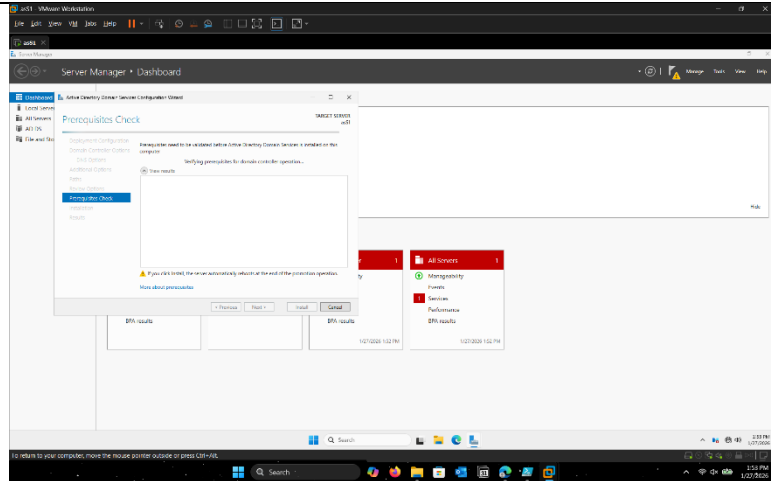


- Monitor the installation process, your screen should match the screenshot.

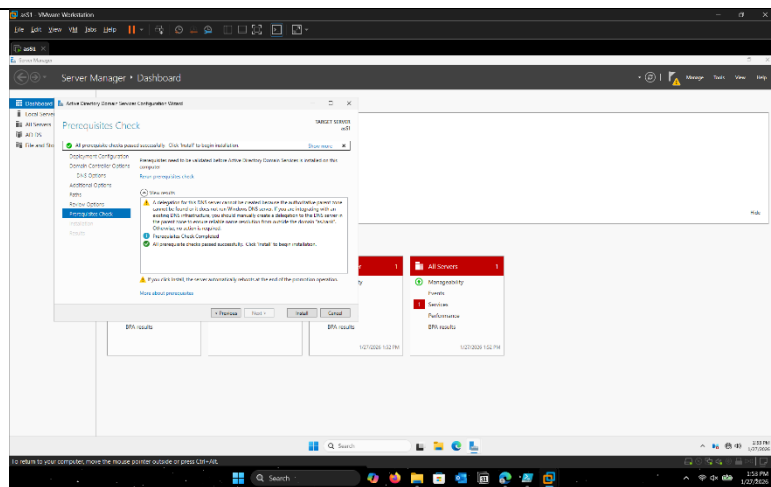


- Continue to monitor the installation process.

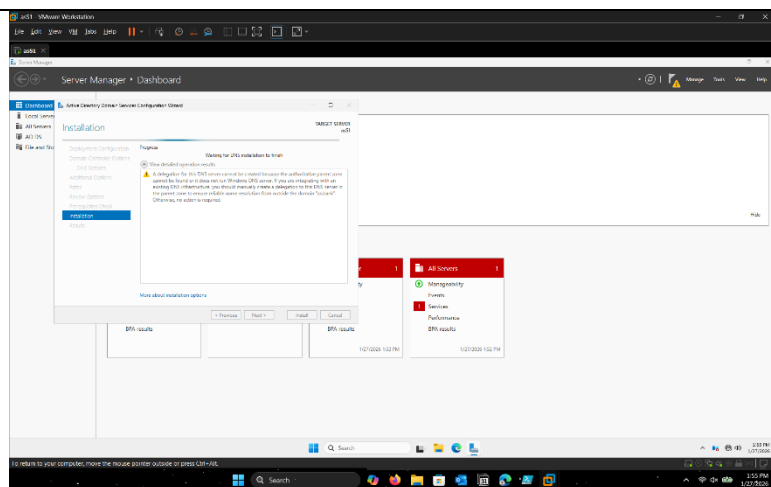


- The system will now sign you out as the server prepares to reboot.

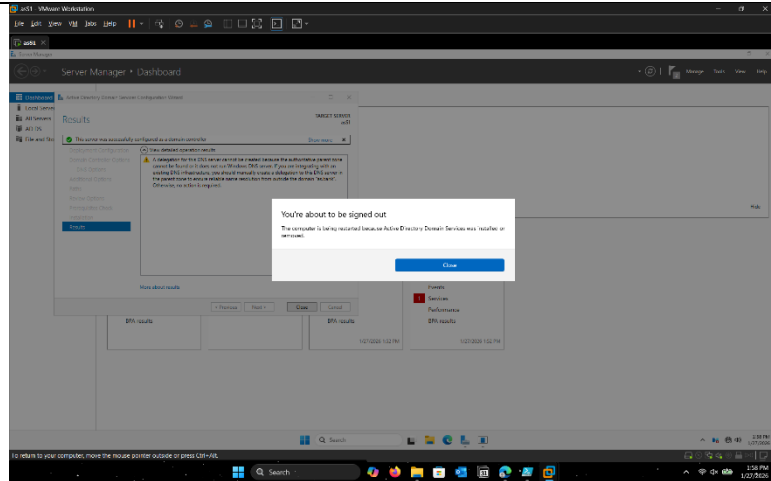


- Monitor the Windows "Restarting" screen to ensure the domain configuration is applied.

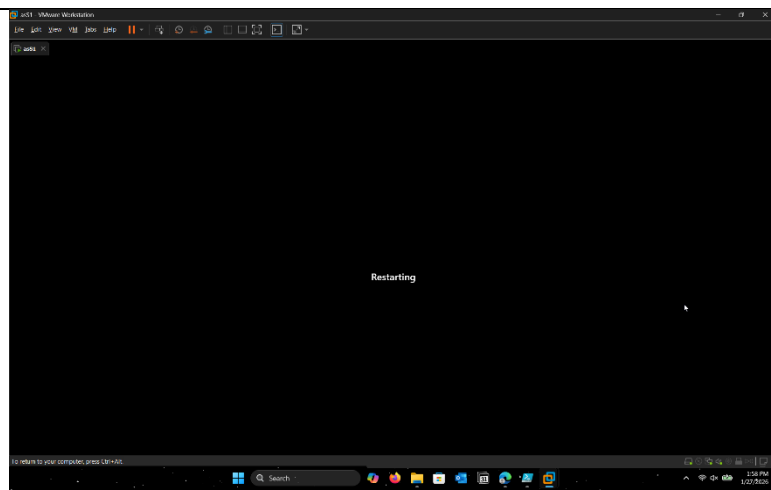


- Once rebooted, sign back into the server as the administrator.

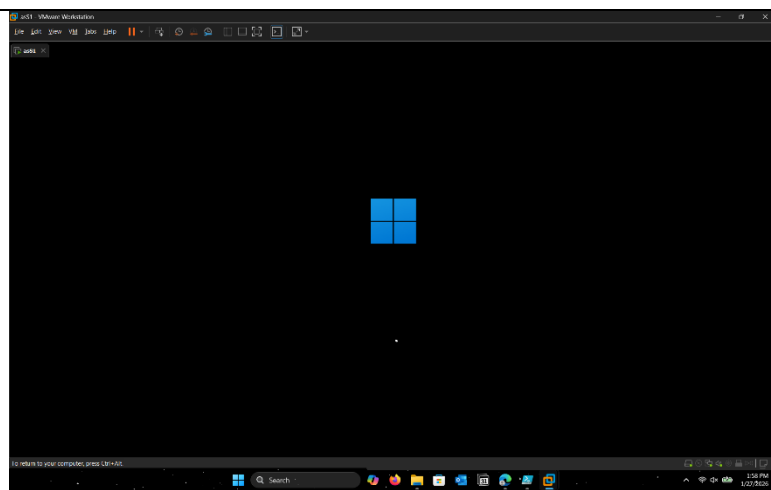


- After rebooting, confirm that AD DS and DNS roles appear in the Server Manager sidebar.

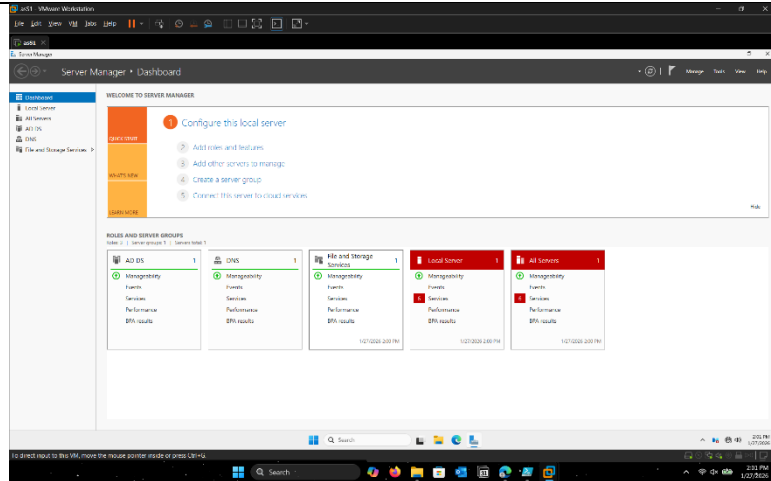


- Open the Search bar and look for "Active Directory Users and Computers" to verify the directory structure is live.

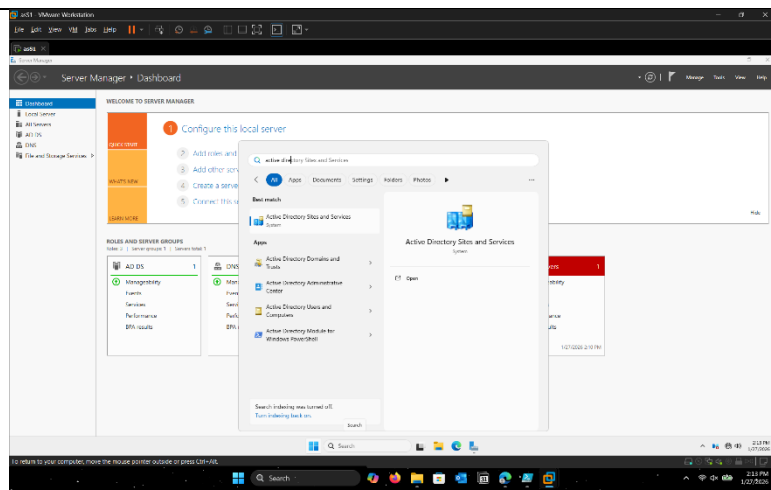


- Expand the as.bank domain to see the default containers like "BuiltIn," "Computers," and "Users".

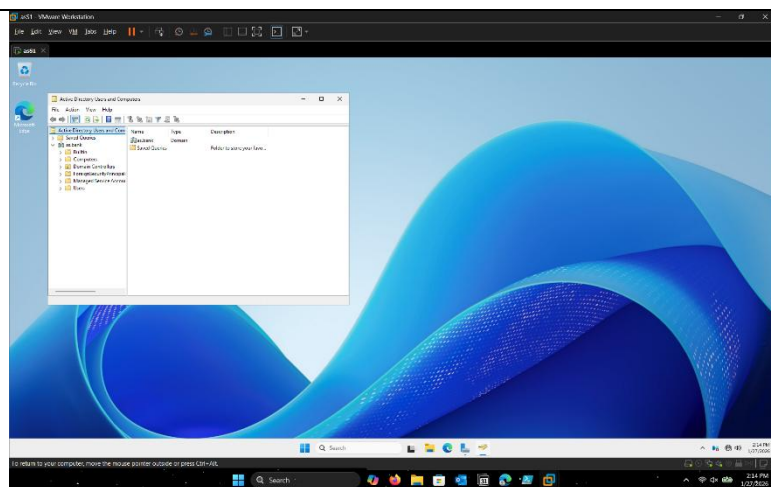


- Once expanded, select the “Domain Controllers” container.

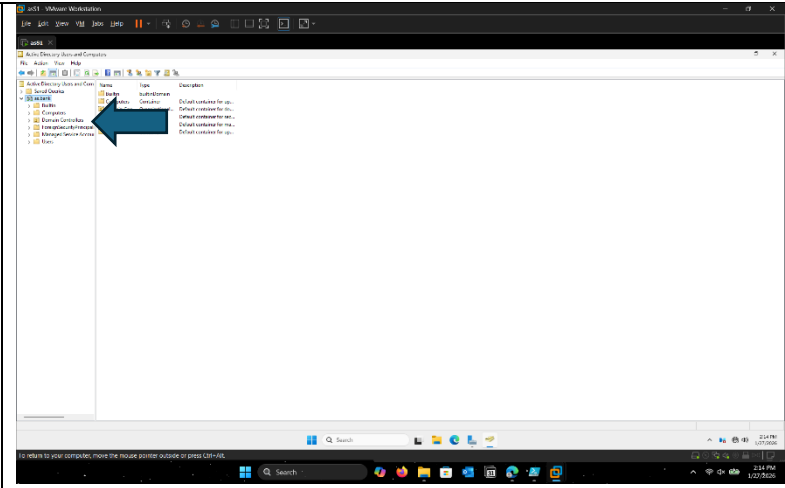


- Confirm that asS1 is listed as a Global Catalog (GC) server in the Domain Controllers organizational unit.

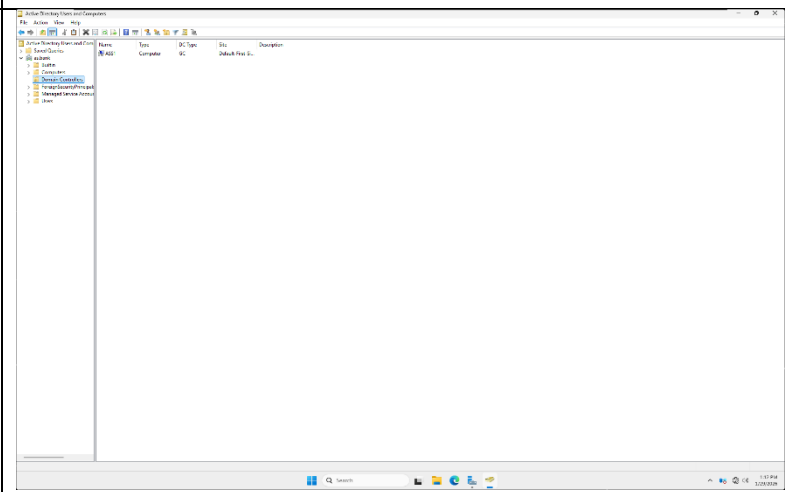


- On the Workstation, open Command Prompt and run `ipconfig /all` to check your current IP and DNS settings.

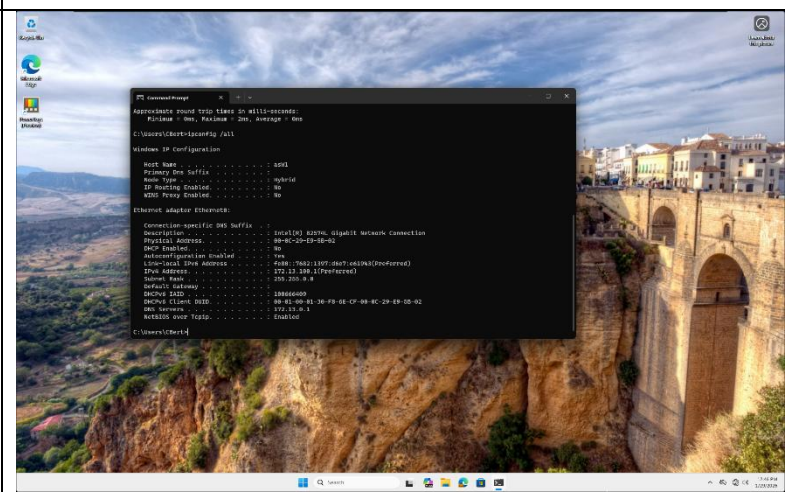


- Open ncpa.cpl to access the Ethernet adapter properties.

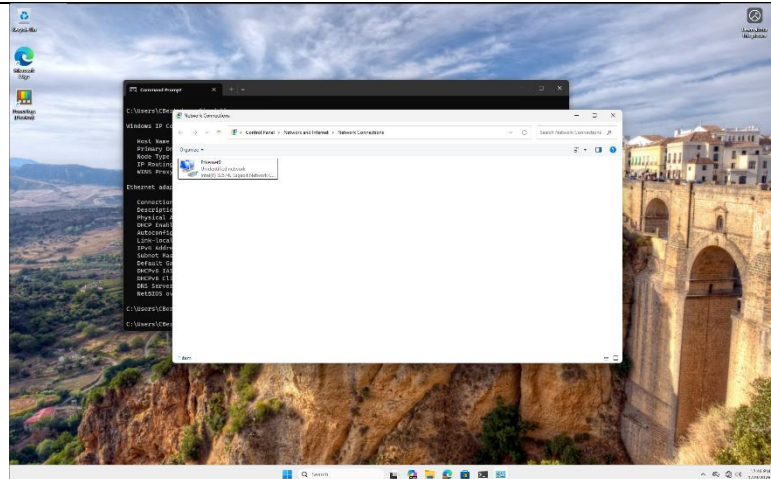


- Select Internet Protocol Version 4 (TCP/IPv4) and click Properties.

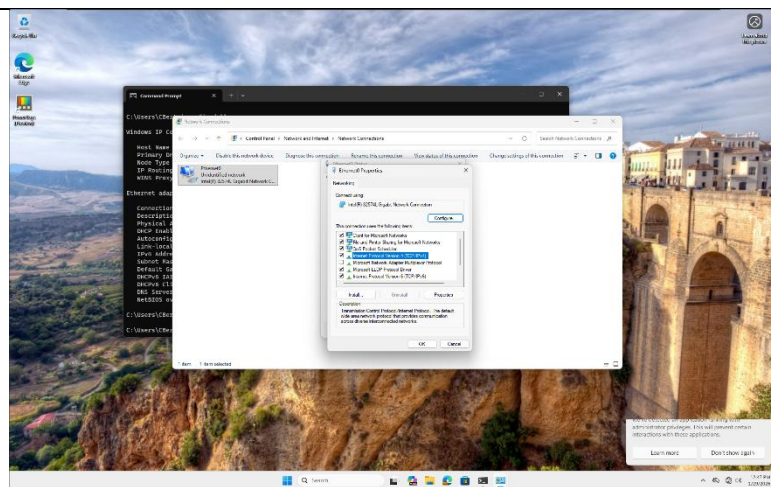


- Manually enter the IP address 172.13.100.1 for the Workstation and set the Preferred DNS to 172.13.0.1 (the Server's IP).

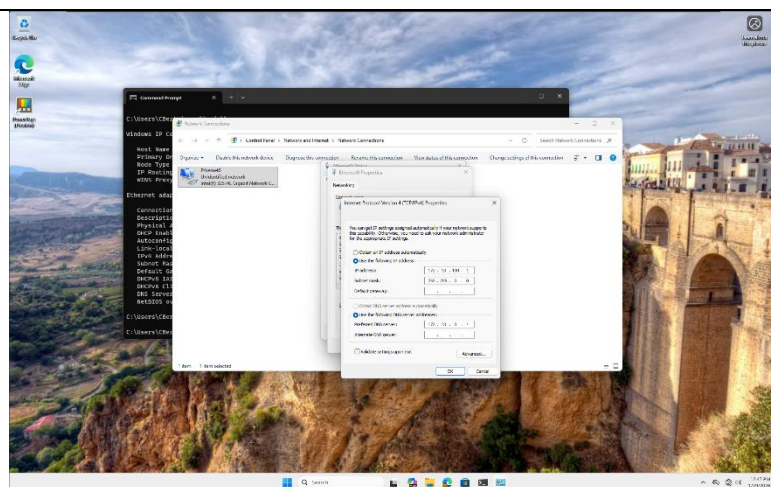


- Rerun `ipconfig /all` to verify your current IP and DNS settings are correct.

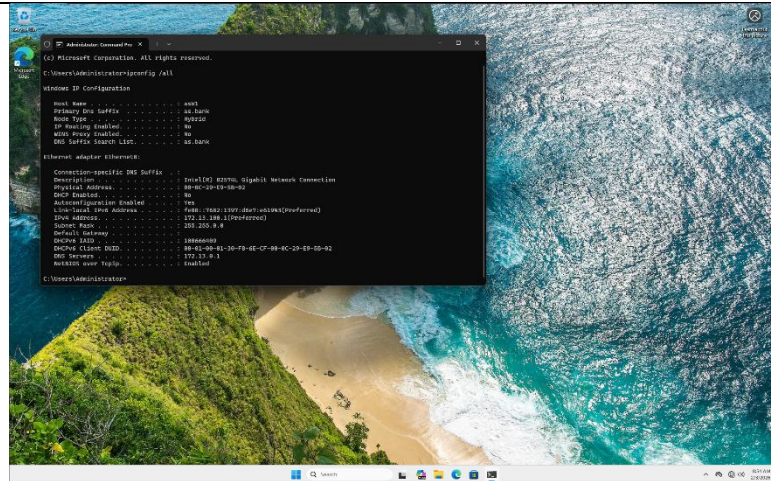


- On the Server, open `ncpa.cpl` to access the Ethernet adapter properties.

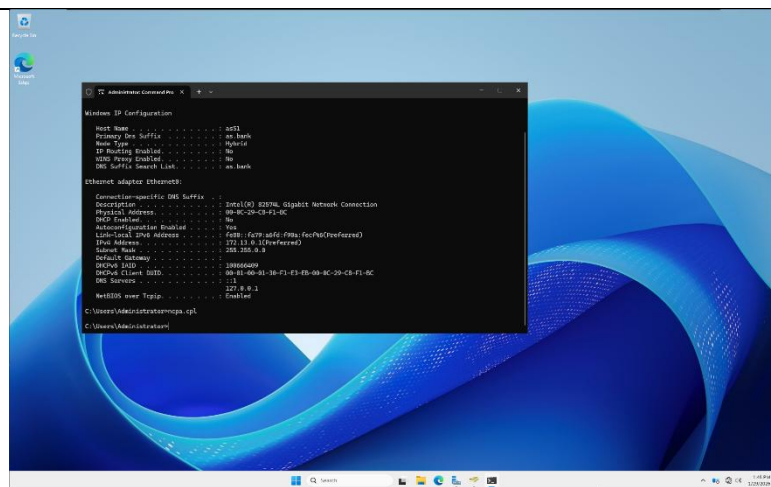


- Select Internet Protocol Version 4 (TCP/IPv4) and click Properties.

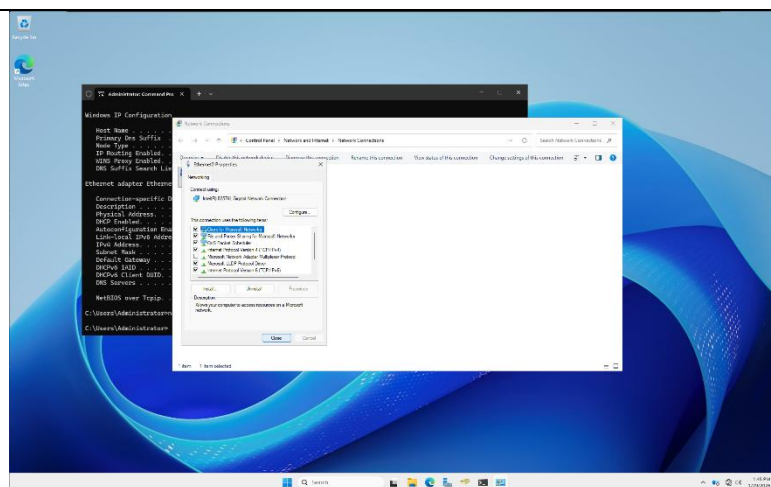


- Manually enter the IP address 172.13.0.1 for the Server and set the Preferred DNS to 172.13.0.1 (the Server's IP/itself).

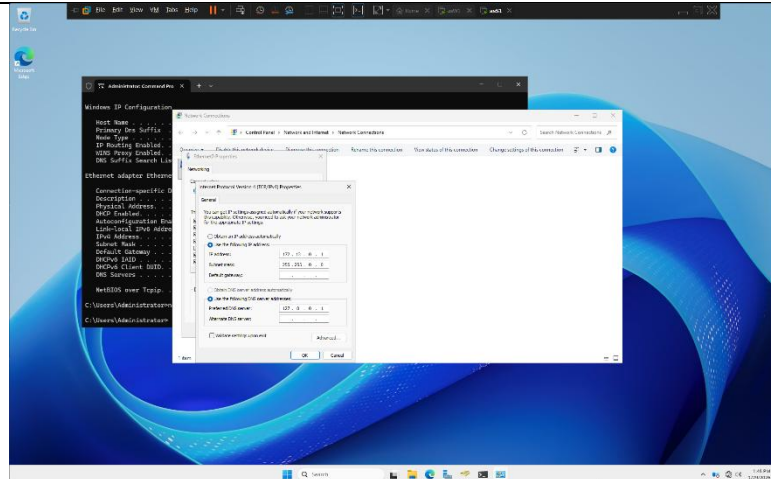


- Open Command Prompt and run ipconfig /all to verify your current IP and DNS settings are correct.

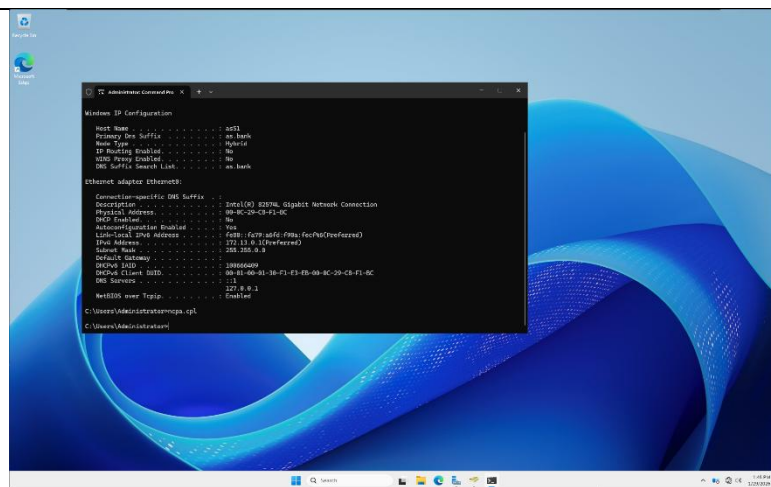


- Now that the servers can talk to each other, confirm this by pinging the server from the workstation with both the IP address and the Computer Name.

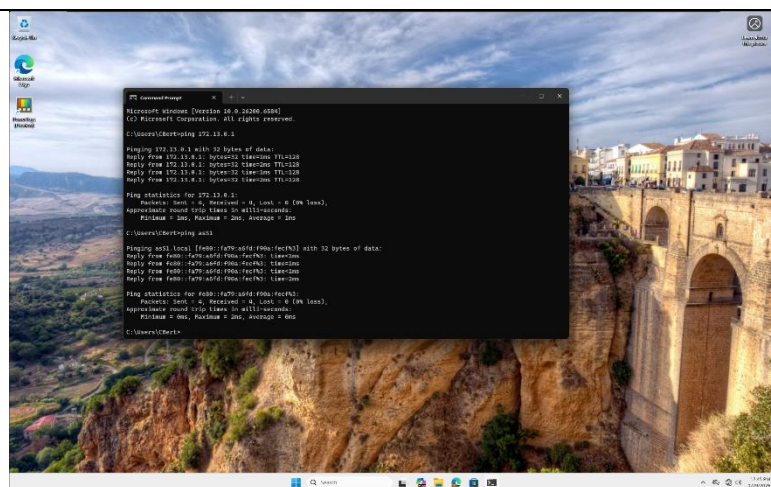


- Return to the Workstation and open the System Properties naming window again.

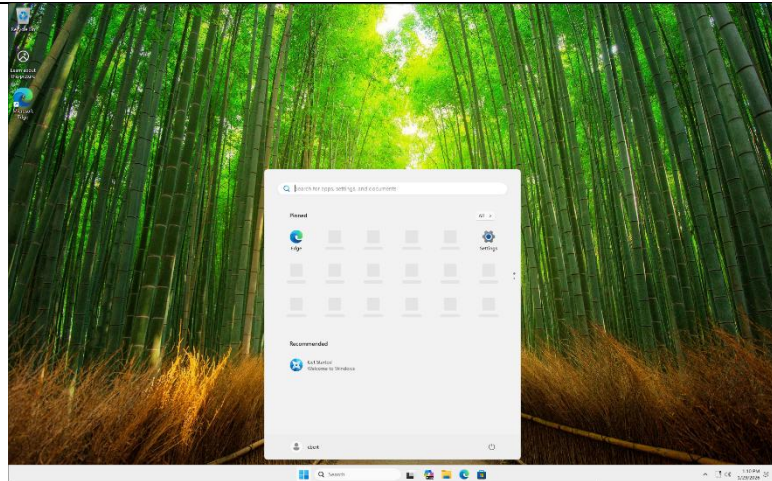


- Click "Change," select "Domain," and type in as.bank

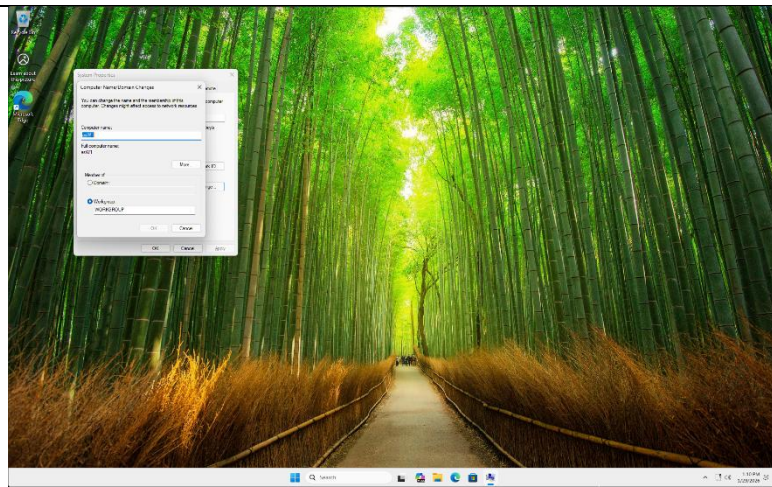


- When prompted, enter the domain administrator credentials.

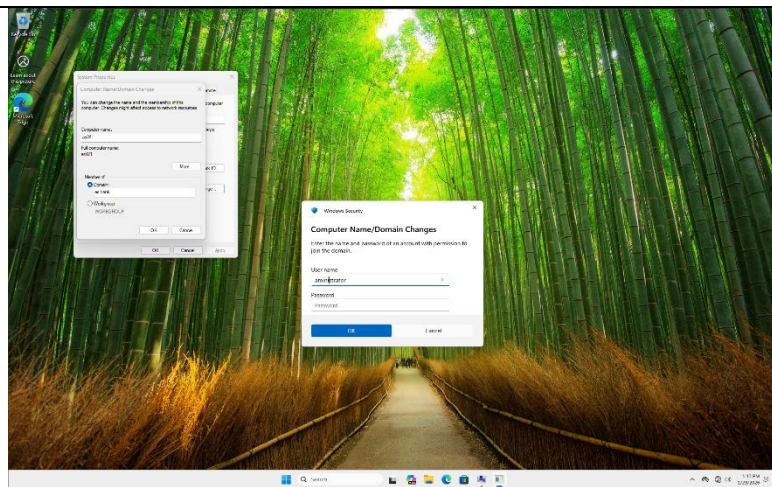

- A "Welcome to the as.bank domain" success message will pop up letting you know you have successfully done this.

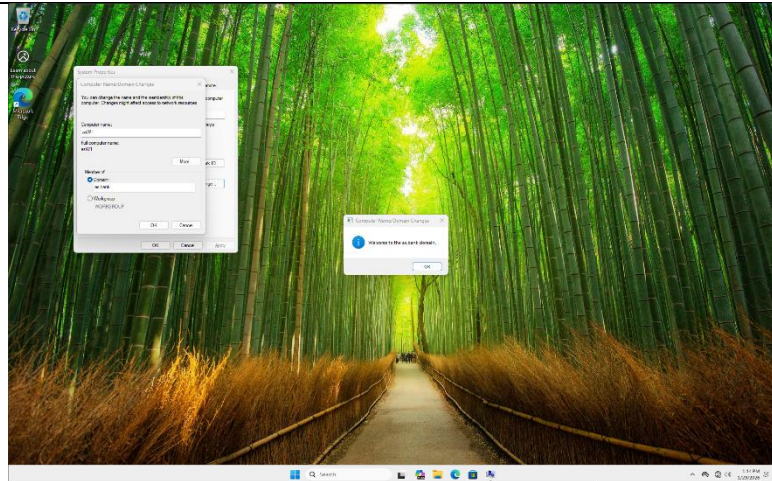

- The workstation will restart automatically.



- Log in using the domain account administrator@as.bank to prove the systems are networked.

